

Copyright © HiSilicon Technologies Co., Ltd. 2012. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of HiSilicon Technologies Co., Ltd.

Trademarks and Permissions

 **HISILICON**, and other HiSilicon icons are trademarks of HiSilicon Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between HiSilicon and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

HiSilicon Technologies Co., Ltd.

Address: Huawei Industrial Base
 Bantian, Longgang
 Shenzhen 518129
 People's Republic of China

Website: <http://www.hisilicon.com>

Email: support@hisilicon.com

About This Document

Purpose

This document describes how to port and burn the U-boot (that is, bootloader of the Hi3531/Hi3532 board) on the Hi3531/Hi3532 board, and how to using ARM debugging tools.

Related Version

The following table lists the product version related to this document.

Product Name	Version
Hi3531	V100
Hi3532	V100

Intended Audience

This document is intended for:

- Technical support personnel
- Software development engineers

Change History

Updates between document issues are cumulative. Therefore, the latest document issue contains all updates made in previous issues.

Issue 00B10 (2012-02-15)

This issue is the baseline release, which incorporates the following changes:

Chapter 2 Porting the U-boot

In section 2.3, **make** commands are updated.

Issue 00B04 (2012-02-15)

This issue is the third draft release, which incorporates the following changes:

Chapter 3 Burning the U-boot

The description of using the simulator is deleted, and the method of burning the U-boot by using the BOOTROM is added.

Issue 00B03 (2012-01-15)

This issue is the third draft release, which incorporates the following changes:

Chapter 2 Porting the U-boot

In section 2.3, the descriptions of toolchains are added.

Issue 00B02 (2011-11-10)

This issue is the second draft release, which incorporates the following changes:

The information about the H3532 is added.

Issue 00B01 (2011-09-30)

This issue is the first draft release.

Contents

1 Overview.....	1
1.1 Description	1
1.2 U-boot Directory Structure.....	1
2 Porting the U-boot.....	1
2.1 Overview	1
2.2 Modifying the Flash Driver.....	1
2.3 Compiling the U-boot.....	1
2.4 Configuring the DDR	2
2.5 Configuring Pin Multiplexing	2
2.6 Generating the Final U-boot Image.....	2
3 Burning the U-boot	1
3.1 Overview	1
3.2 Burning the U-boot by Using the BOOTROM	1
3.3 Burning the U-boot to Two Types of Flash Memories	1
3.3.1 Burning the U-boot to the SPI Flash	1
3.3.2 Burning the U-boot to the NAND Flash	2
4 Using ARM Debugging Tools.....	3
4.1 Overview	3
4.2 ARM Debugging Tools	3
4.2.1 RealView -ICE Simulator	3
4.2.2 RealView Debugger4.0	3
4.3 Usage Guidelines	4

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/338132141110006106>