
BEOPLAY A8

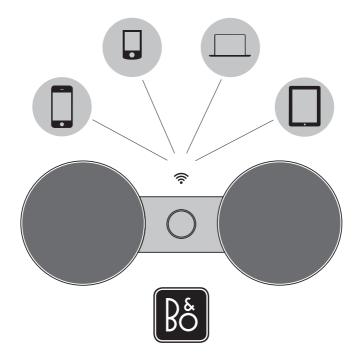



See www.beoplay.com/a8 for more information.



Important information

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

Cautions, 4

English, 8

Русский (Russian), 14

中文 (Simplified Chinese), 20

繁體中文 (Traditional Chinese), 26

日本語 (Japanese), 32

한국어 (Korean), 38

Important information, 44

Cautions

English

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose
 of the polarized or groundingtype plug. A polarized plug has
 two blades with one wider than
 the other. A grounding type plug
 has two blades and a third
 grounding prong. The wide
 blade or the third prong are
 provided for your safety. If the
 provided plug does not fit into
 your outlet, consult an
 electrician for replacement of
 the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/ accessories specified by the manufacturer.



- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified

service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

- The product can only be switched off completely by disconnecting it from the mains socket. The mains socket must always be accessible.
- Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases are placed on the equipment.
- Do not expose batteries or battery packs to excessive heat such as sunshine, fire or the like.
- No naked flame sources, such as lighted candles should be placed on the equipment.
- Follow instructions to ensure

correct and safe installation and interconnection of equipment in multimedia systems.

Русский (Russian)

- Для полного выключения изделия необходимо отключить его от электрической розетки.
 К настенной электрической розетке всегда должен быть простой доступ.
- Не допускайте попадания капель и брызг на оборудование и не ставьте на него сосуды с жидкостью, например вазы.
- Не подвергайте батареи или аккумуляторные батареи чрезмерному нагреву, например, не оставляйте на солнце, у огня и т. д.
- Запрещается помещать на оборудование источники открытого пламени, например зажженные свечи.
- Выполните инструкции для обеспечения правильной и безопасной установки и соединения устройств в мультимедийных системах.

中文 (Chinese - simplified)

- 只有从电源插座上断开产品电源, 才能将其完全关闭。电源插孔必须 随时可用。
- 请勿将液体滴溅在本设备上,并确 保本设备上未放置任何装有液体 的物品(如花瓶)。
- 切勿让电池或电池组曝露在阳光、 火光等过热环境中。
- 确保本设备上面没有放置任何明 火火源(像点燃的蜡烛)。
- 请遵守使用说明,以确保在多媒体 系统中正确安全的安装和连接设 备。

警告: 为了降低火灾或触电危险, 请勿让本电器淋雨或受潮。



等边三角形内带有箭头符号的闪电是要提醒用户注意,本产品的机壳内存在未绝缘的"危险电压",可

>> Cautions

能会造成触电事故。



等边三角形内的感叹号是 要提醒用户注意,本产品 的随附资料中有重要的操 作和维护(维修)说明。

繁體中文 (Chinese - traditional)

- 唯有從插座上拔除插頭,才能完 全關閉本產品的電源。牆上插座 必須能夠輕鬆方便的使用。
- 請勿對本設備噴灑任何液體,亦 不可將盛有液體的容器(如花瓶) 置於本設備上。
- 請勿將電池暴露在高溫之下,如 陽光、火焰或類似熱源!
- 不可將火焰,如點燃的蠟燭放在 本設備上。
- 請遵循指示,以確保設備的安裝及多種媒體系統之連線正確且安全。

日本語 (Japanese)

- 製品を完全に電源から切り離す には、電源ケーブルをコンセントか ら抜いてください。接続には、抜 き差しがしやすい場所にあるコン セントを選んでください。
- 水がかかる場所などでこの機器 を使わないでください。また、花 瓶など液体が入った容器は、この 機器の上に置かないでください。
- 電池やバッテリーパックを、直射 日光の当たる場所や熱源の近くな どに放置しないでください。
- 火のついたろうそくなど、裸火を 製品の上に置かないでください。
- 説明書の指示に従って、マルチメ ディアシステムの各機器を安全に 設置し、正しく接続してください。

한국어 (Korean)

- 전원 콘센트에서 플러그를
 뽑으면 제품이 완전히 꺼집니다.
 전원 콘센트에 항상 손이 쉽게
 닿을 수 있어야 합니다.
- 기기에 물방울이 떨어지거나 물이 튀지 않게 하고, 화분과 같이 액체가 든 물건을 기기 위에 올려 놓지 마십시오.
- 햇빛이나 화기와 같은 뜨거운
 열에 배터리 또는 배터리 팩이
 노출되지 않도록 하십시오.

촛불과 같이 뜨거운 열원을
 기기 위에 올려 놓지 마십시오.

 멀티미디어 시스템에서 기기의 상호 연결과 정확하고 안전한 설치를 보장하려면 다음 지침을 따르십시오.



The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.

5



The AirPlay Logo is a trademark of Apple Inc., registered in the U.S. and other countries.

以上内容仅为本文档的试下载部分,为可阅读页数的一半内容。如要下载或阅读全文,请访问: https://d.book118.com/34524331114
1011132