




G38(A), G39(B)  
Power Management Control ECU

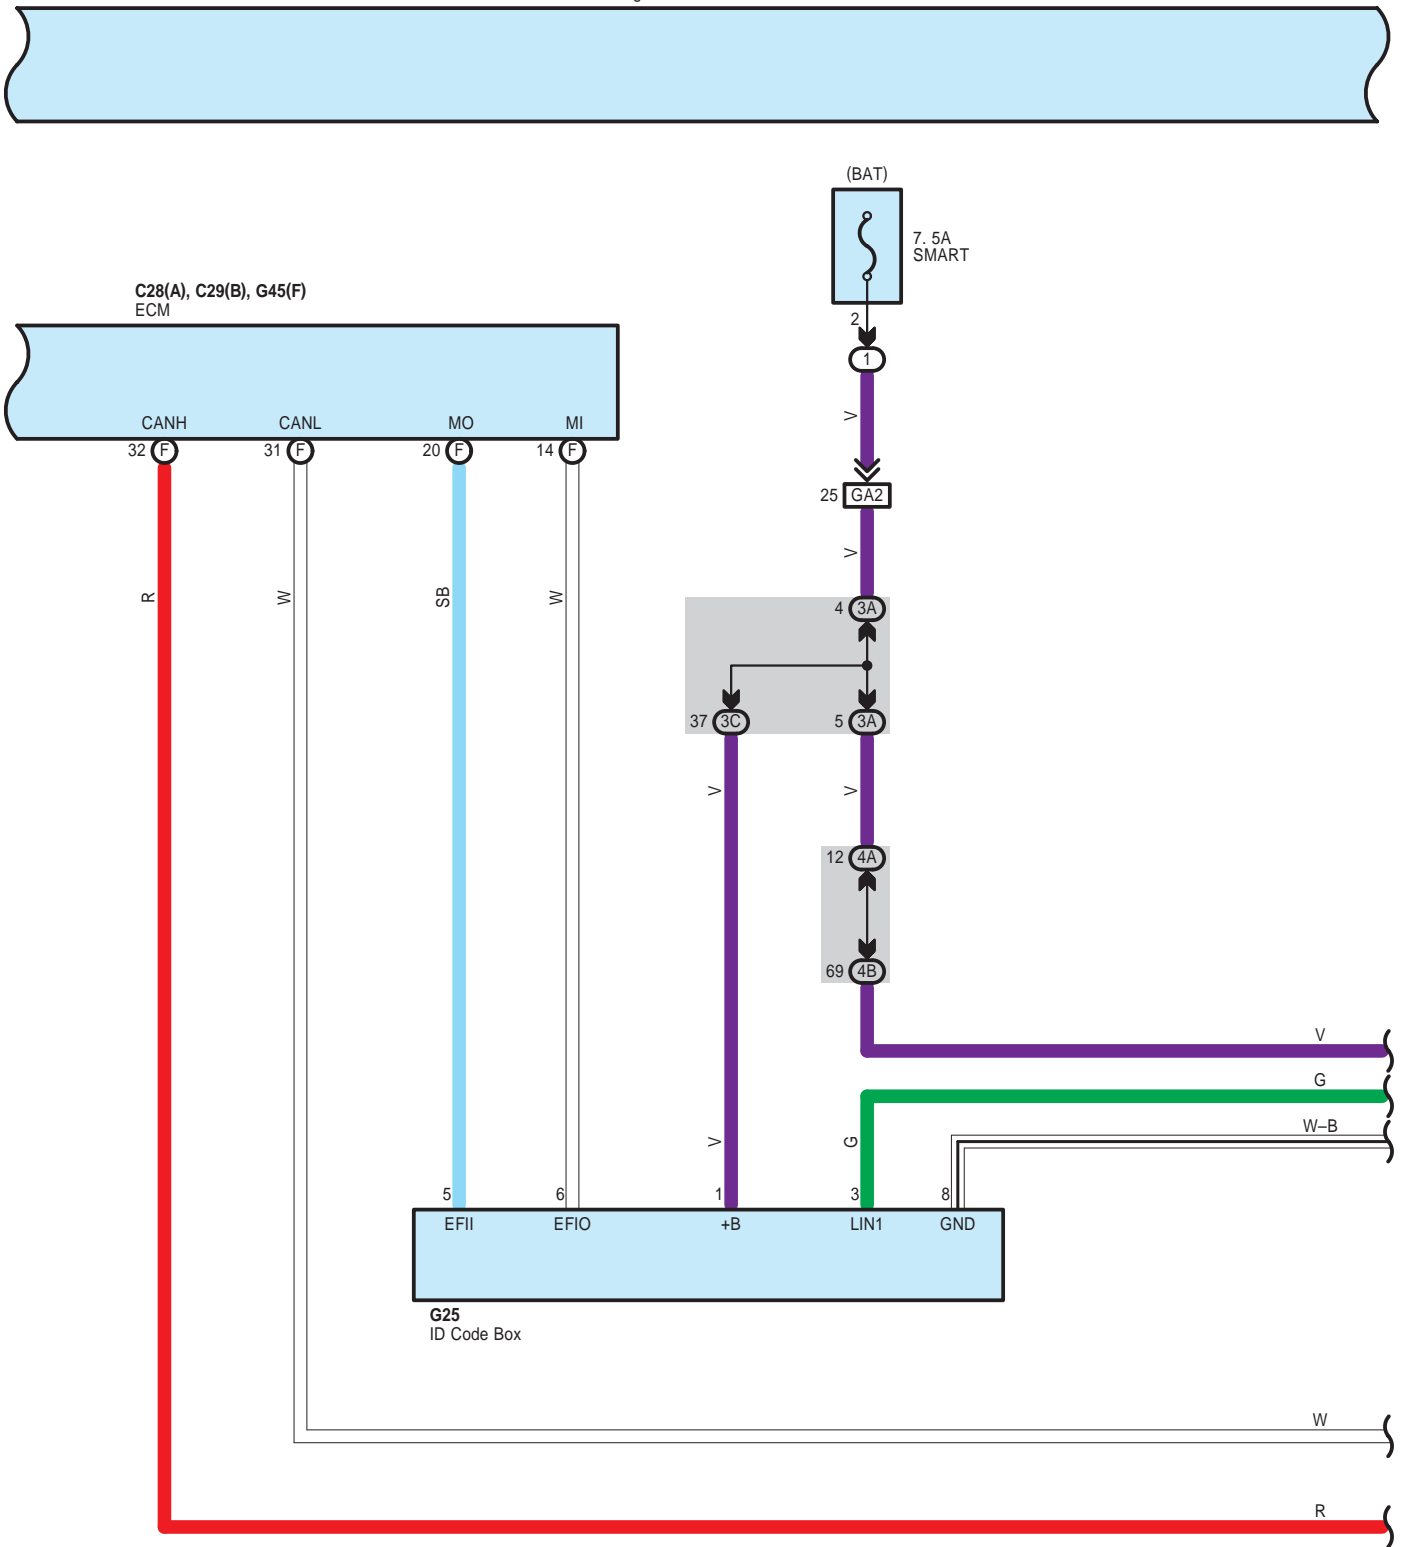


G38(A), G39(B)  
Power Management Control ECU

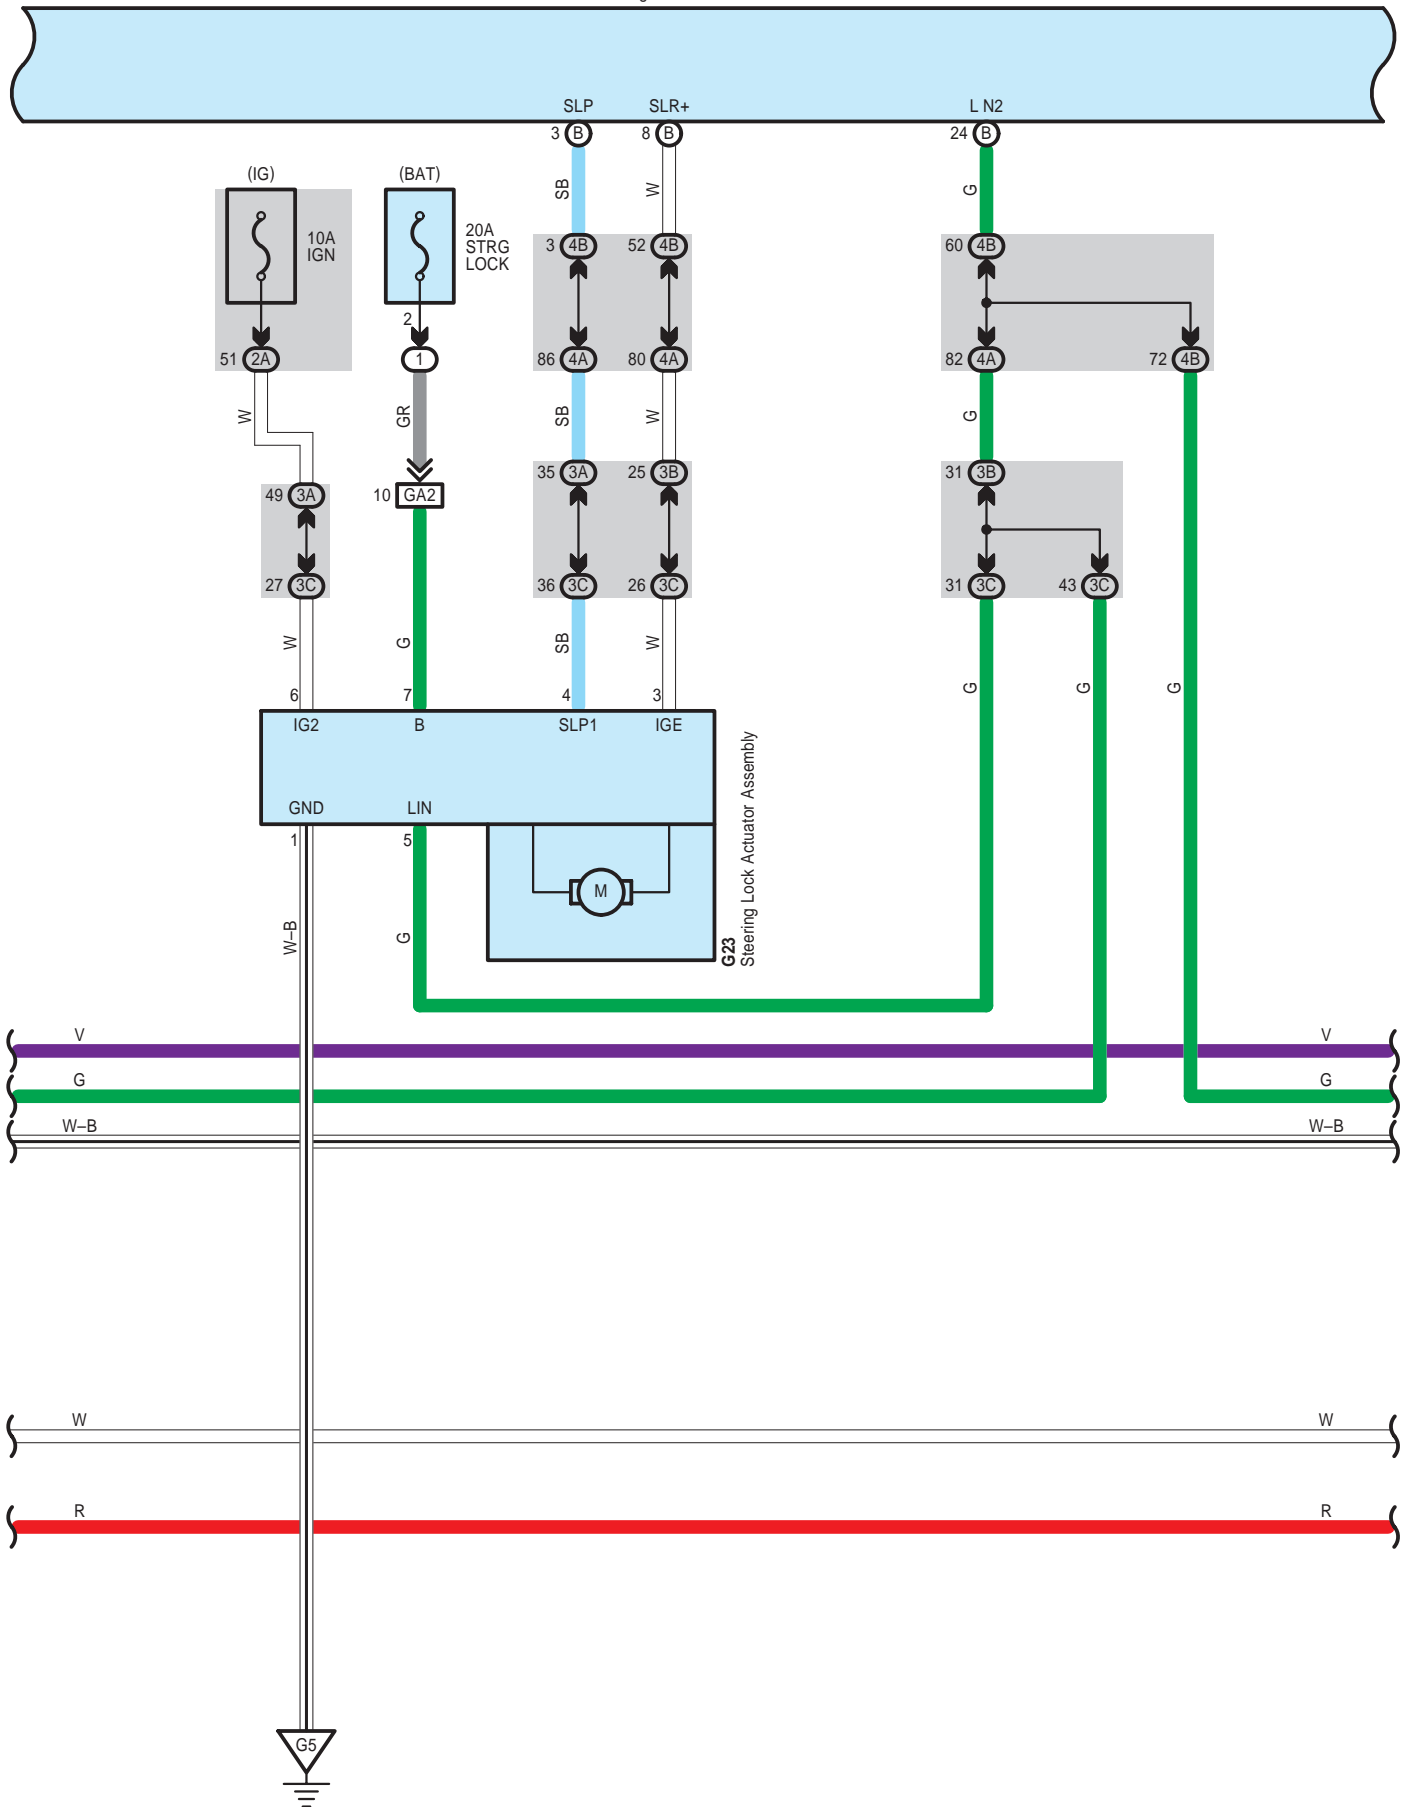


G38(A), G39(B)  
Power Management Control ECU

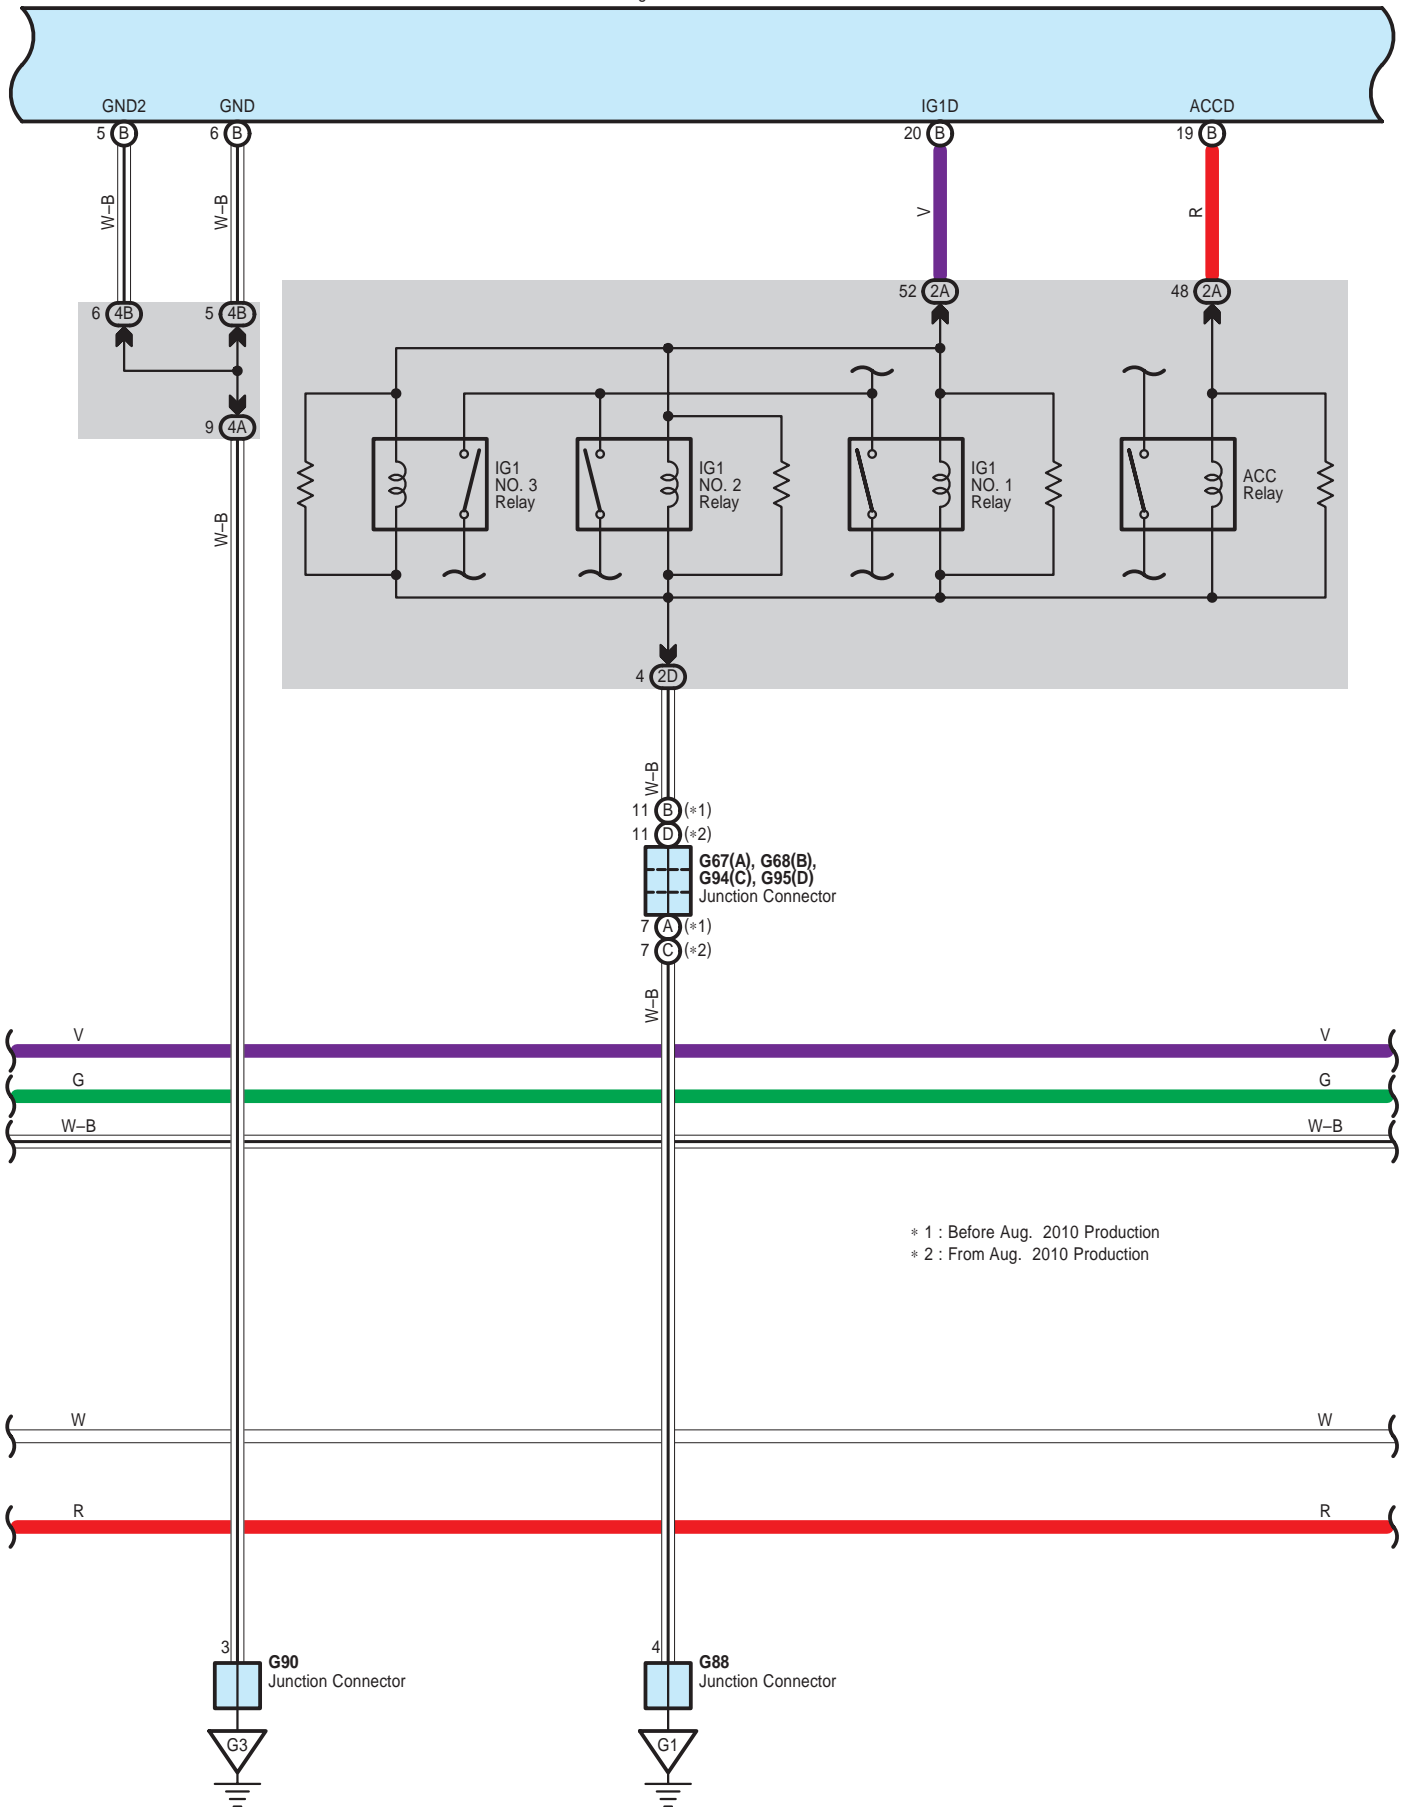


G38(A), G39(B)  
Power Management Control ECU

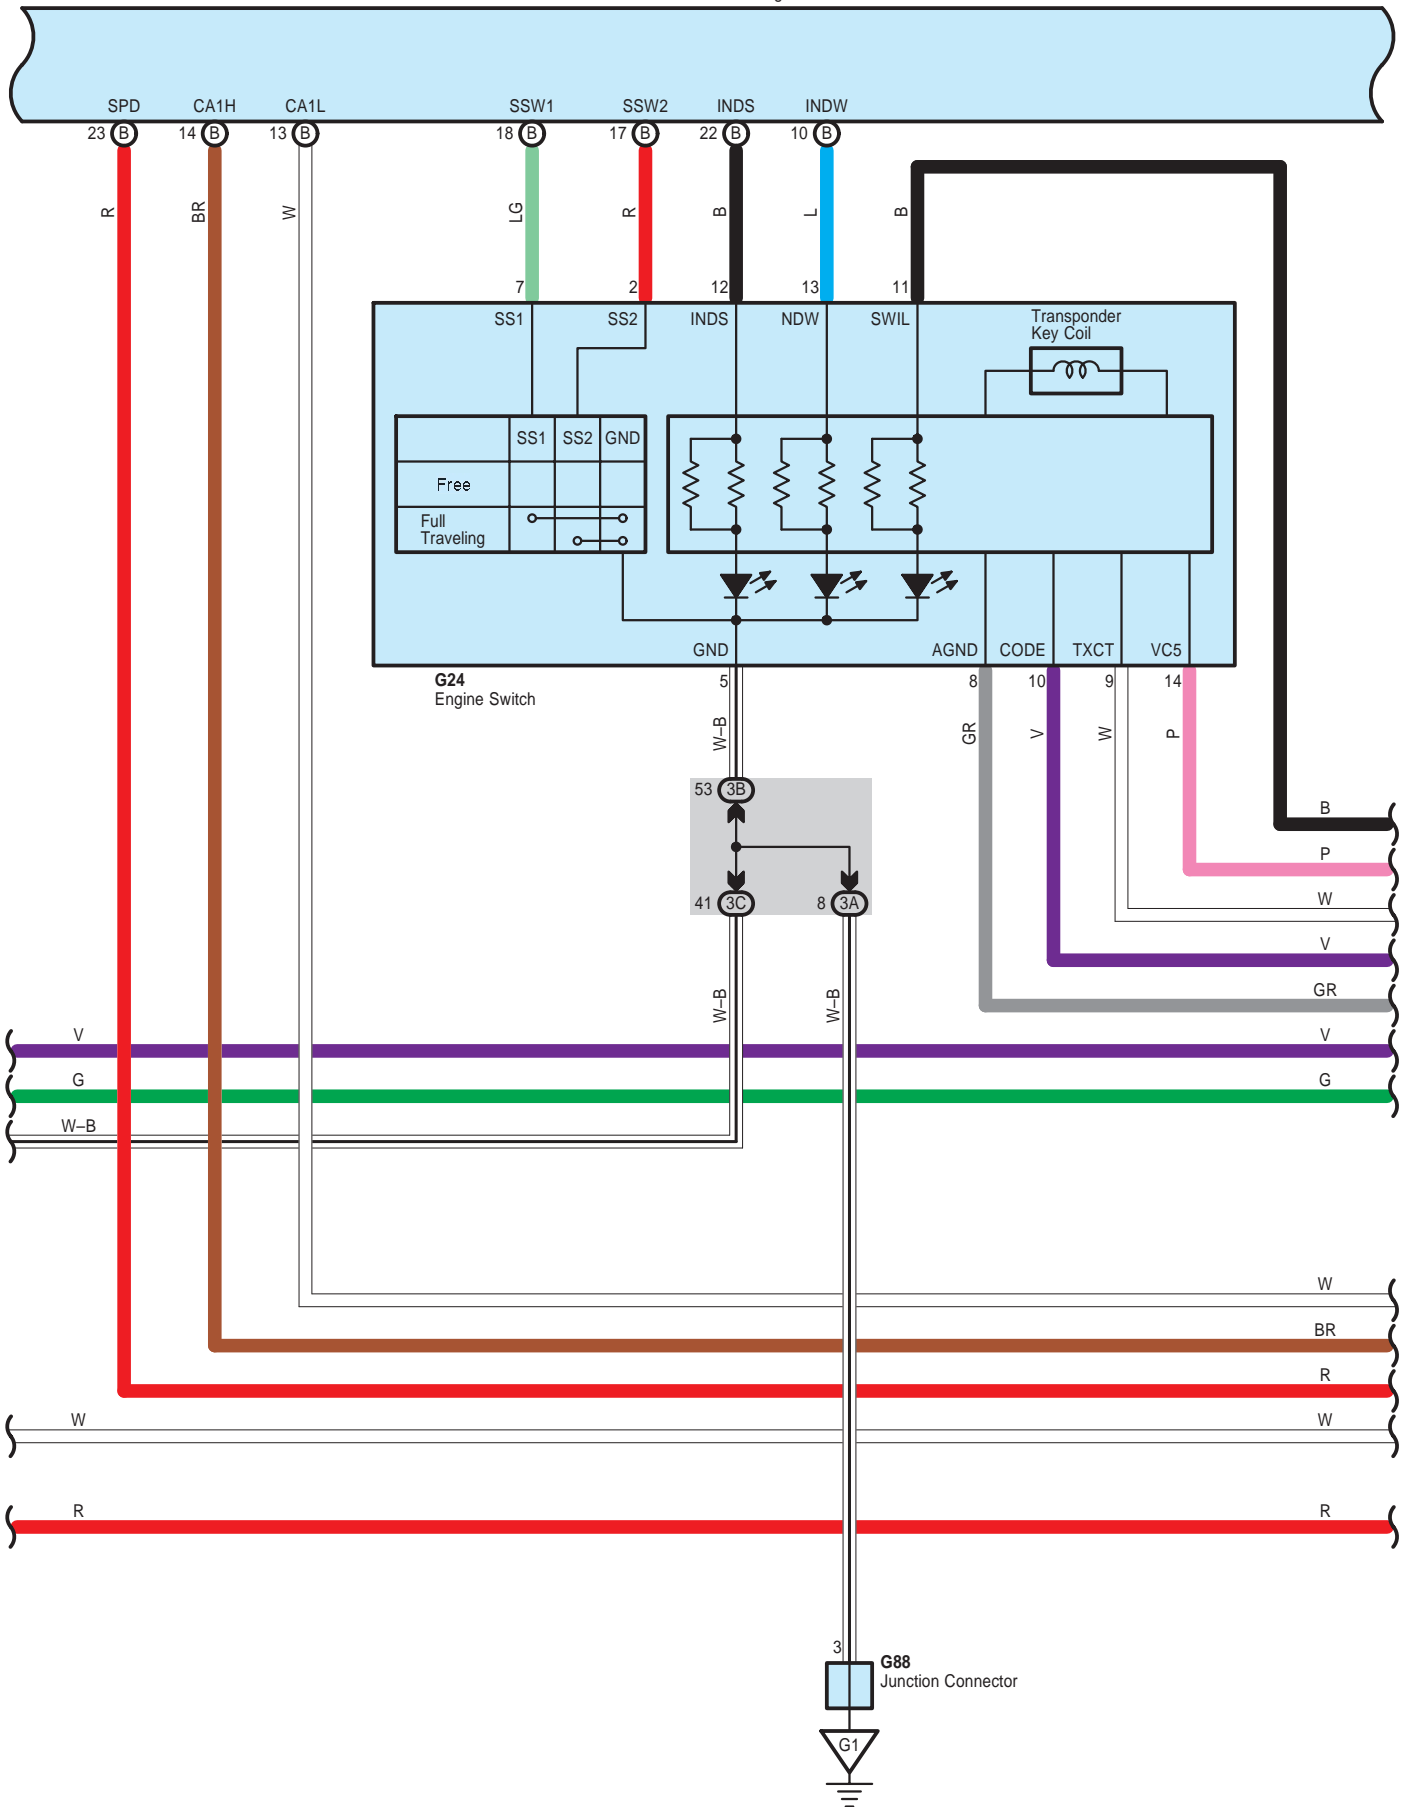


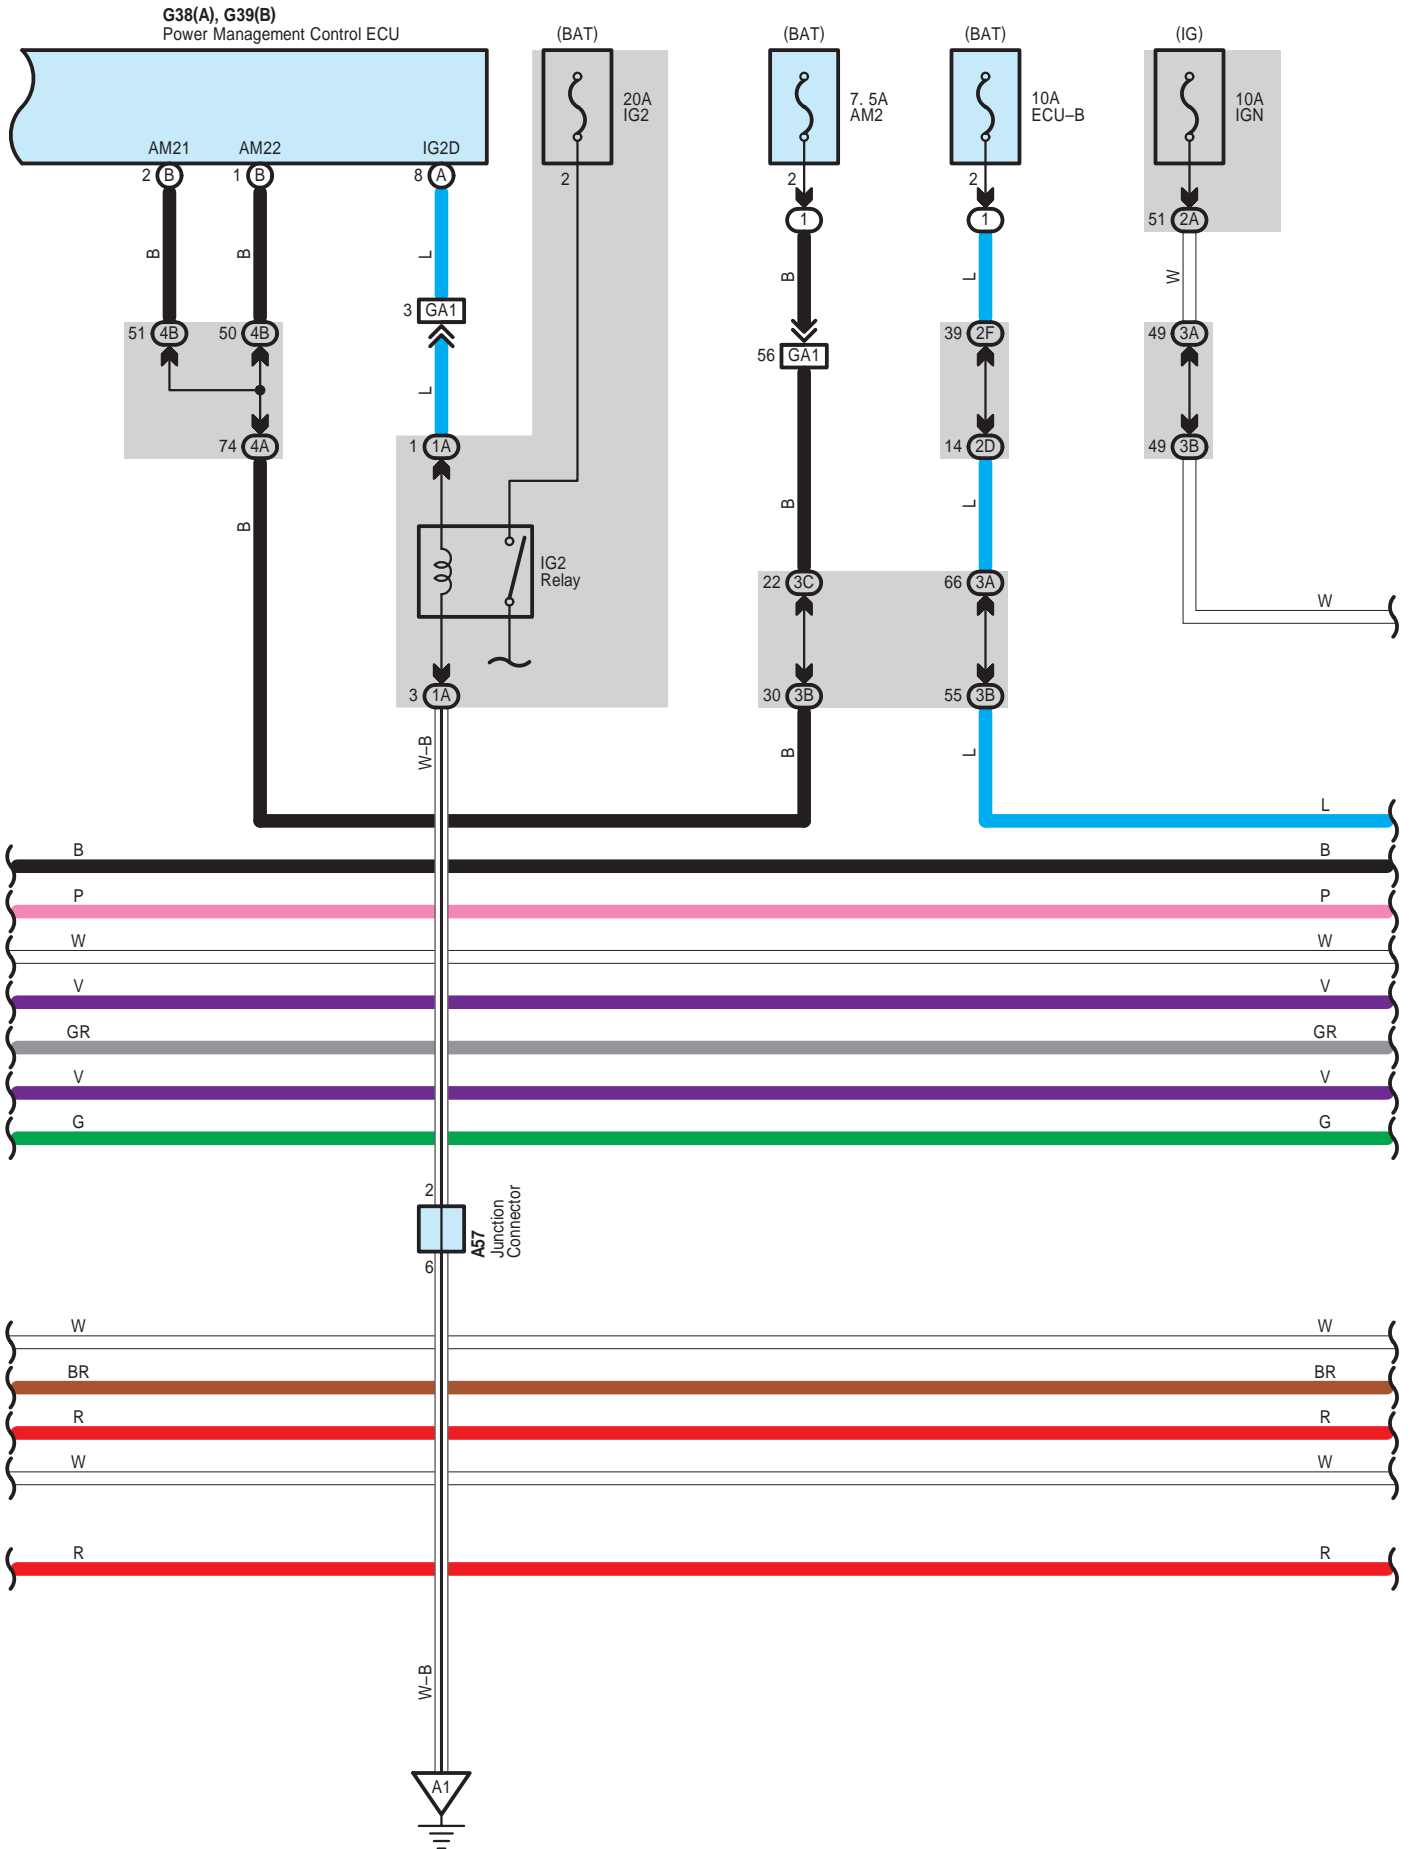

G26(A), G27(B)  
Certification ECU Assembly

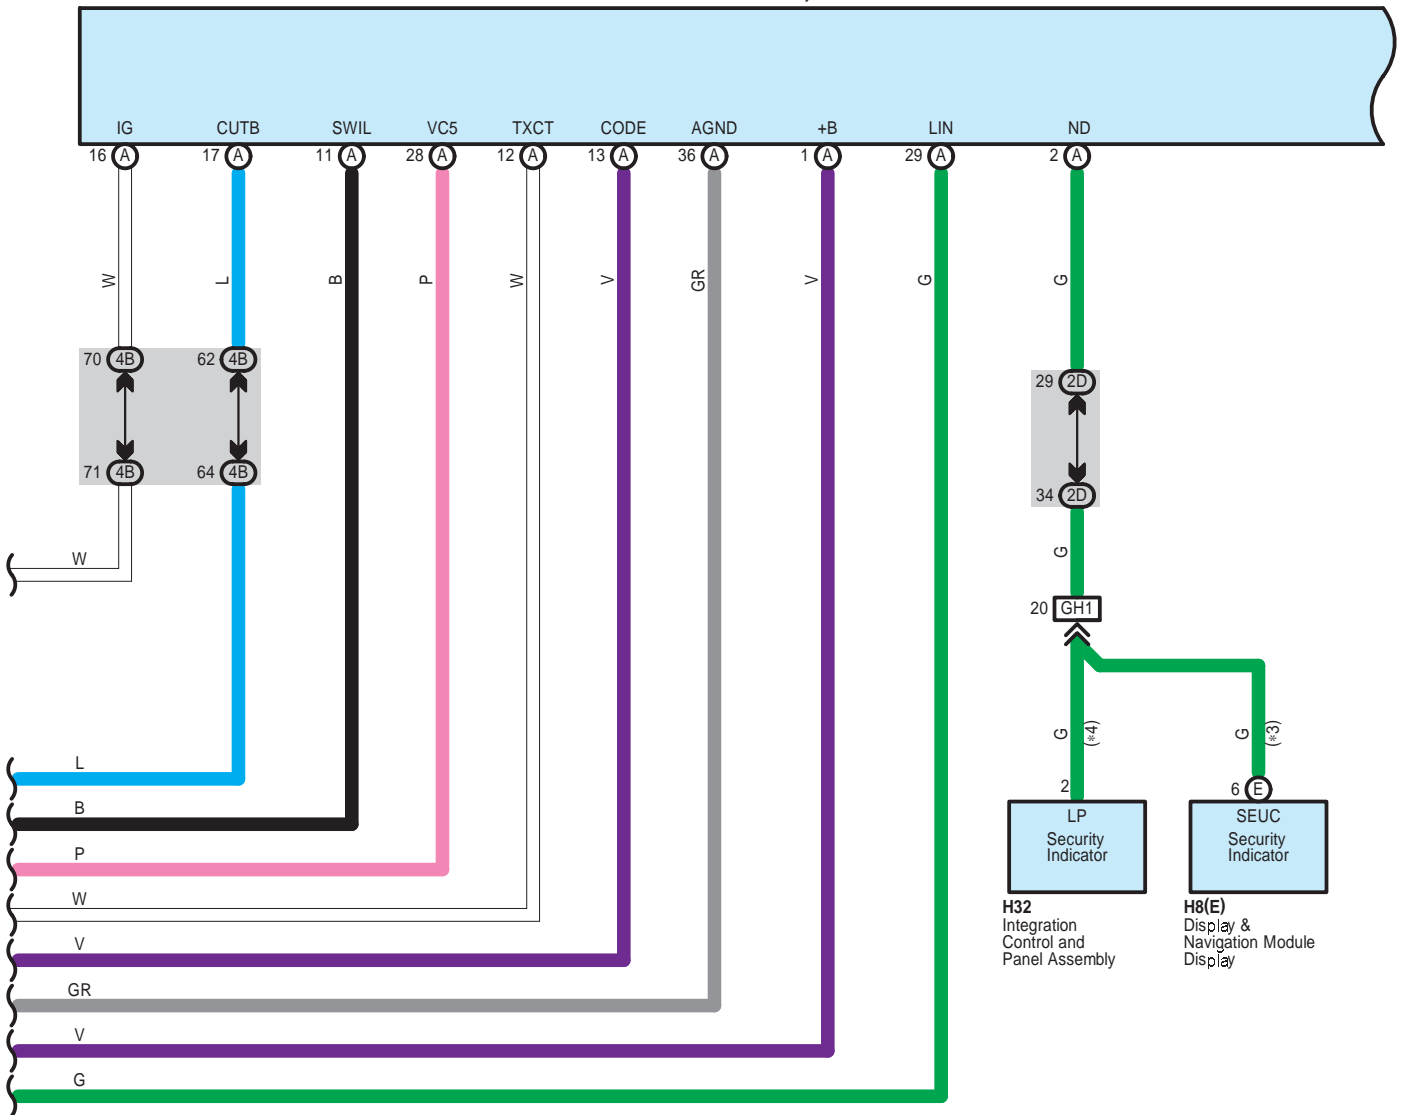


\* 3 : w/ LEXUS Navigation System  
\* 4 : w/o LEXUS Navigation System

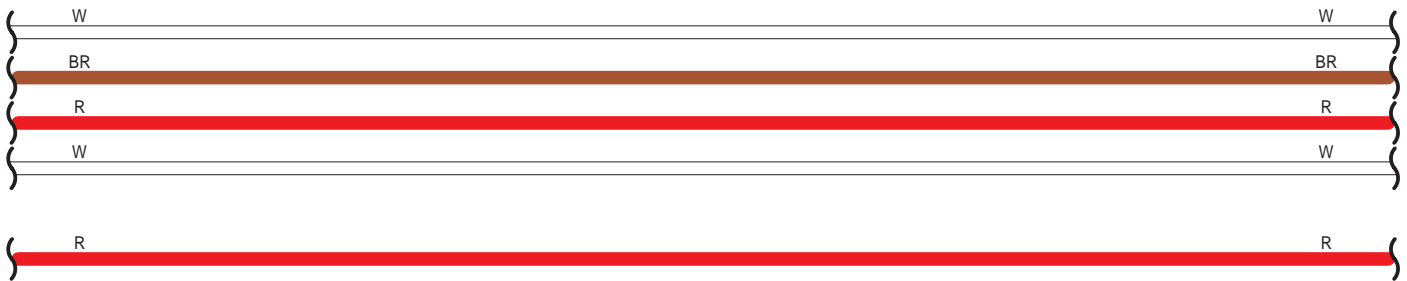





G26(A), G27(B)  
Certification ECU Assembly


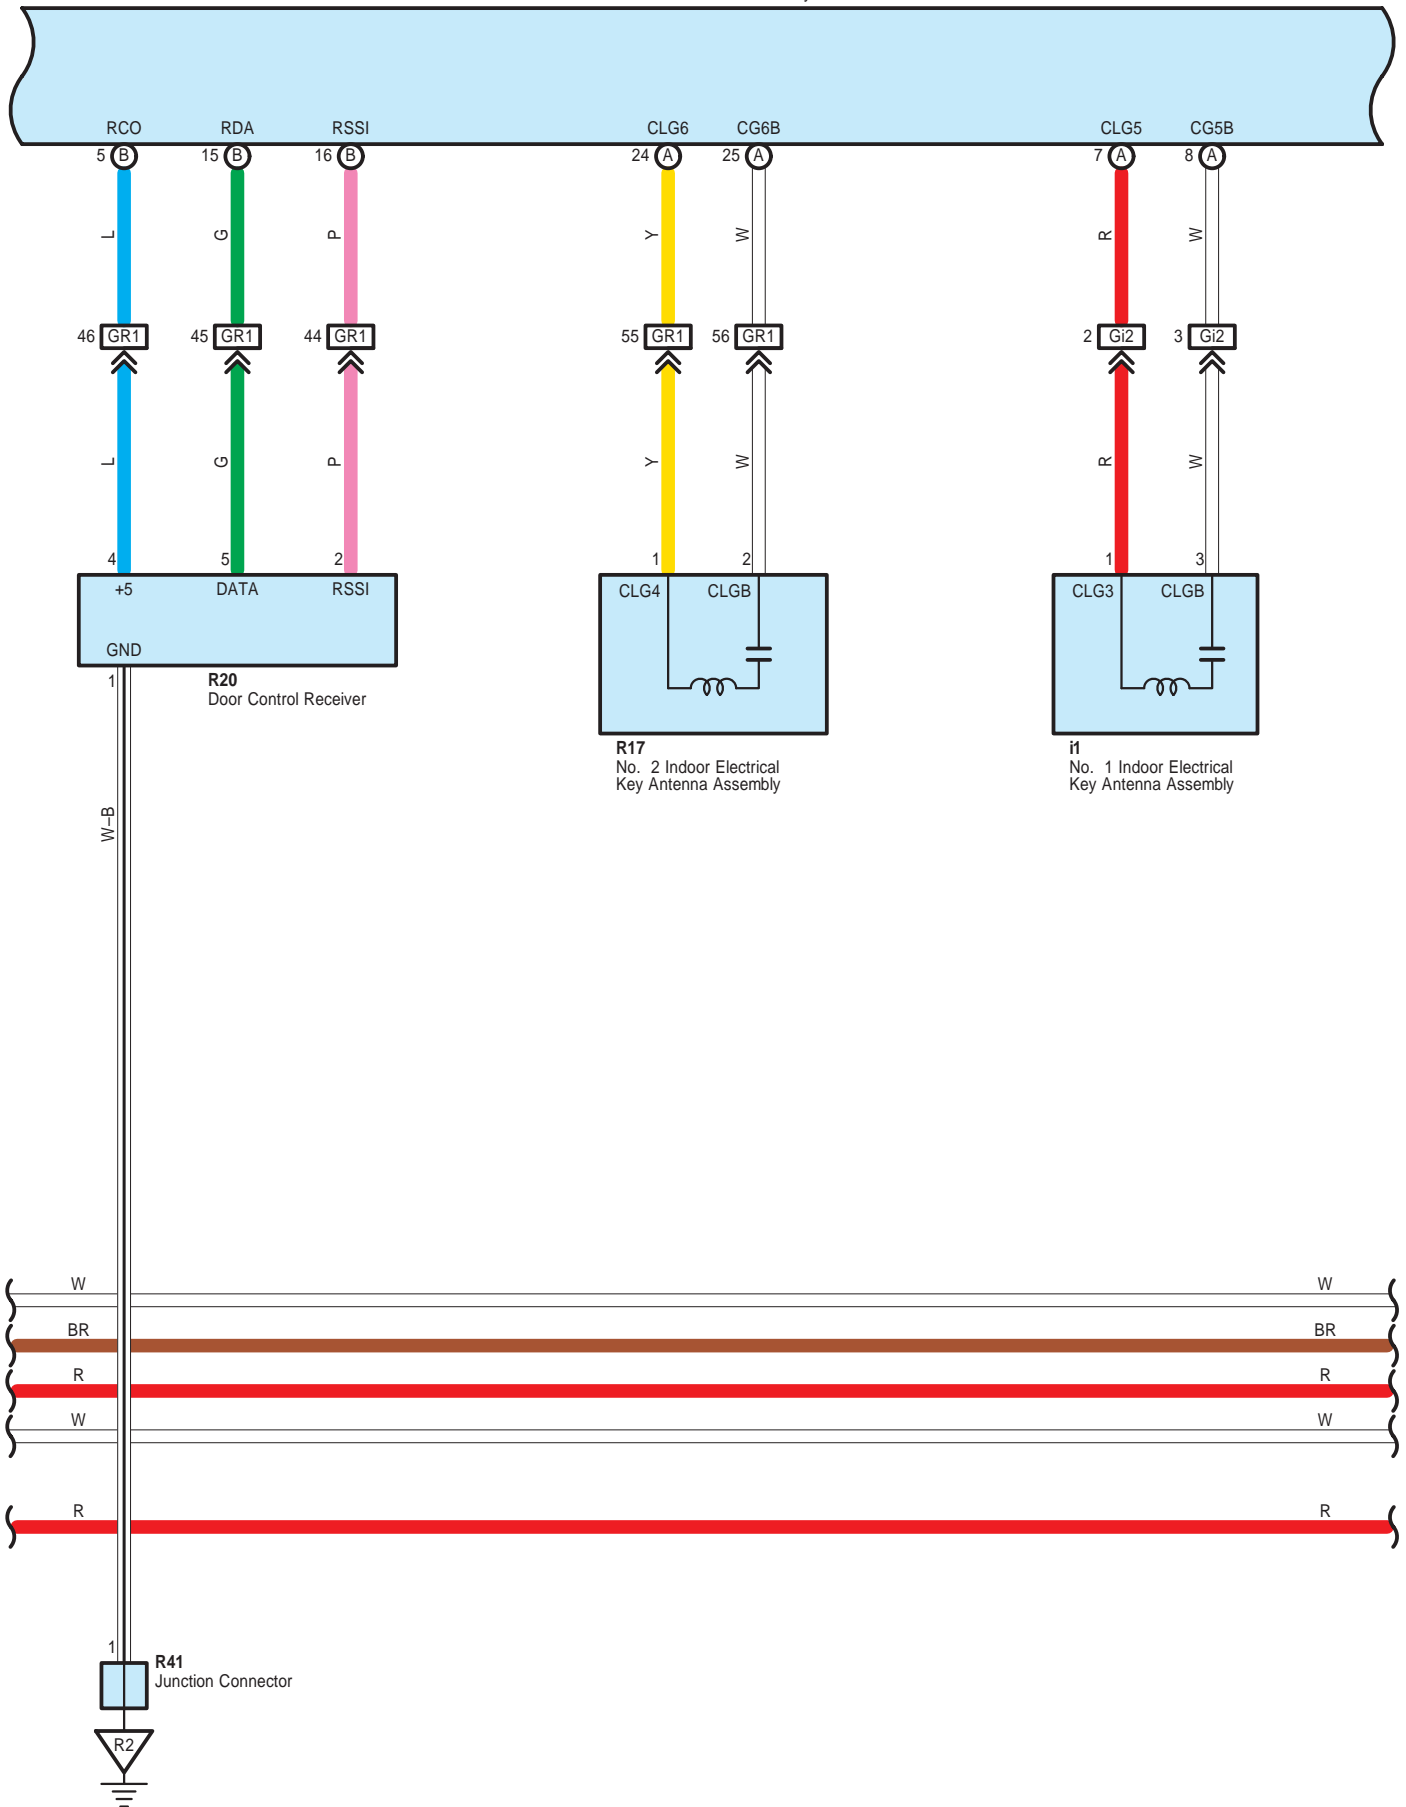



G26(A), G27(B)  
Certification ECU Assembly

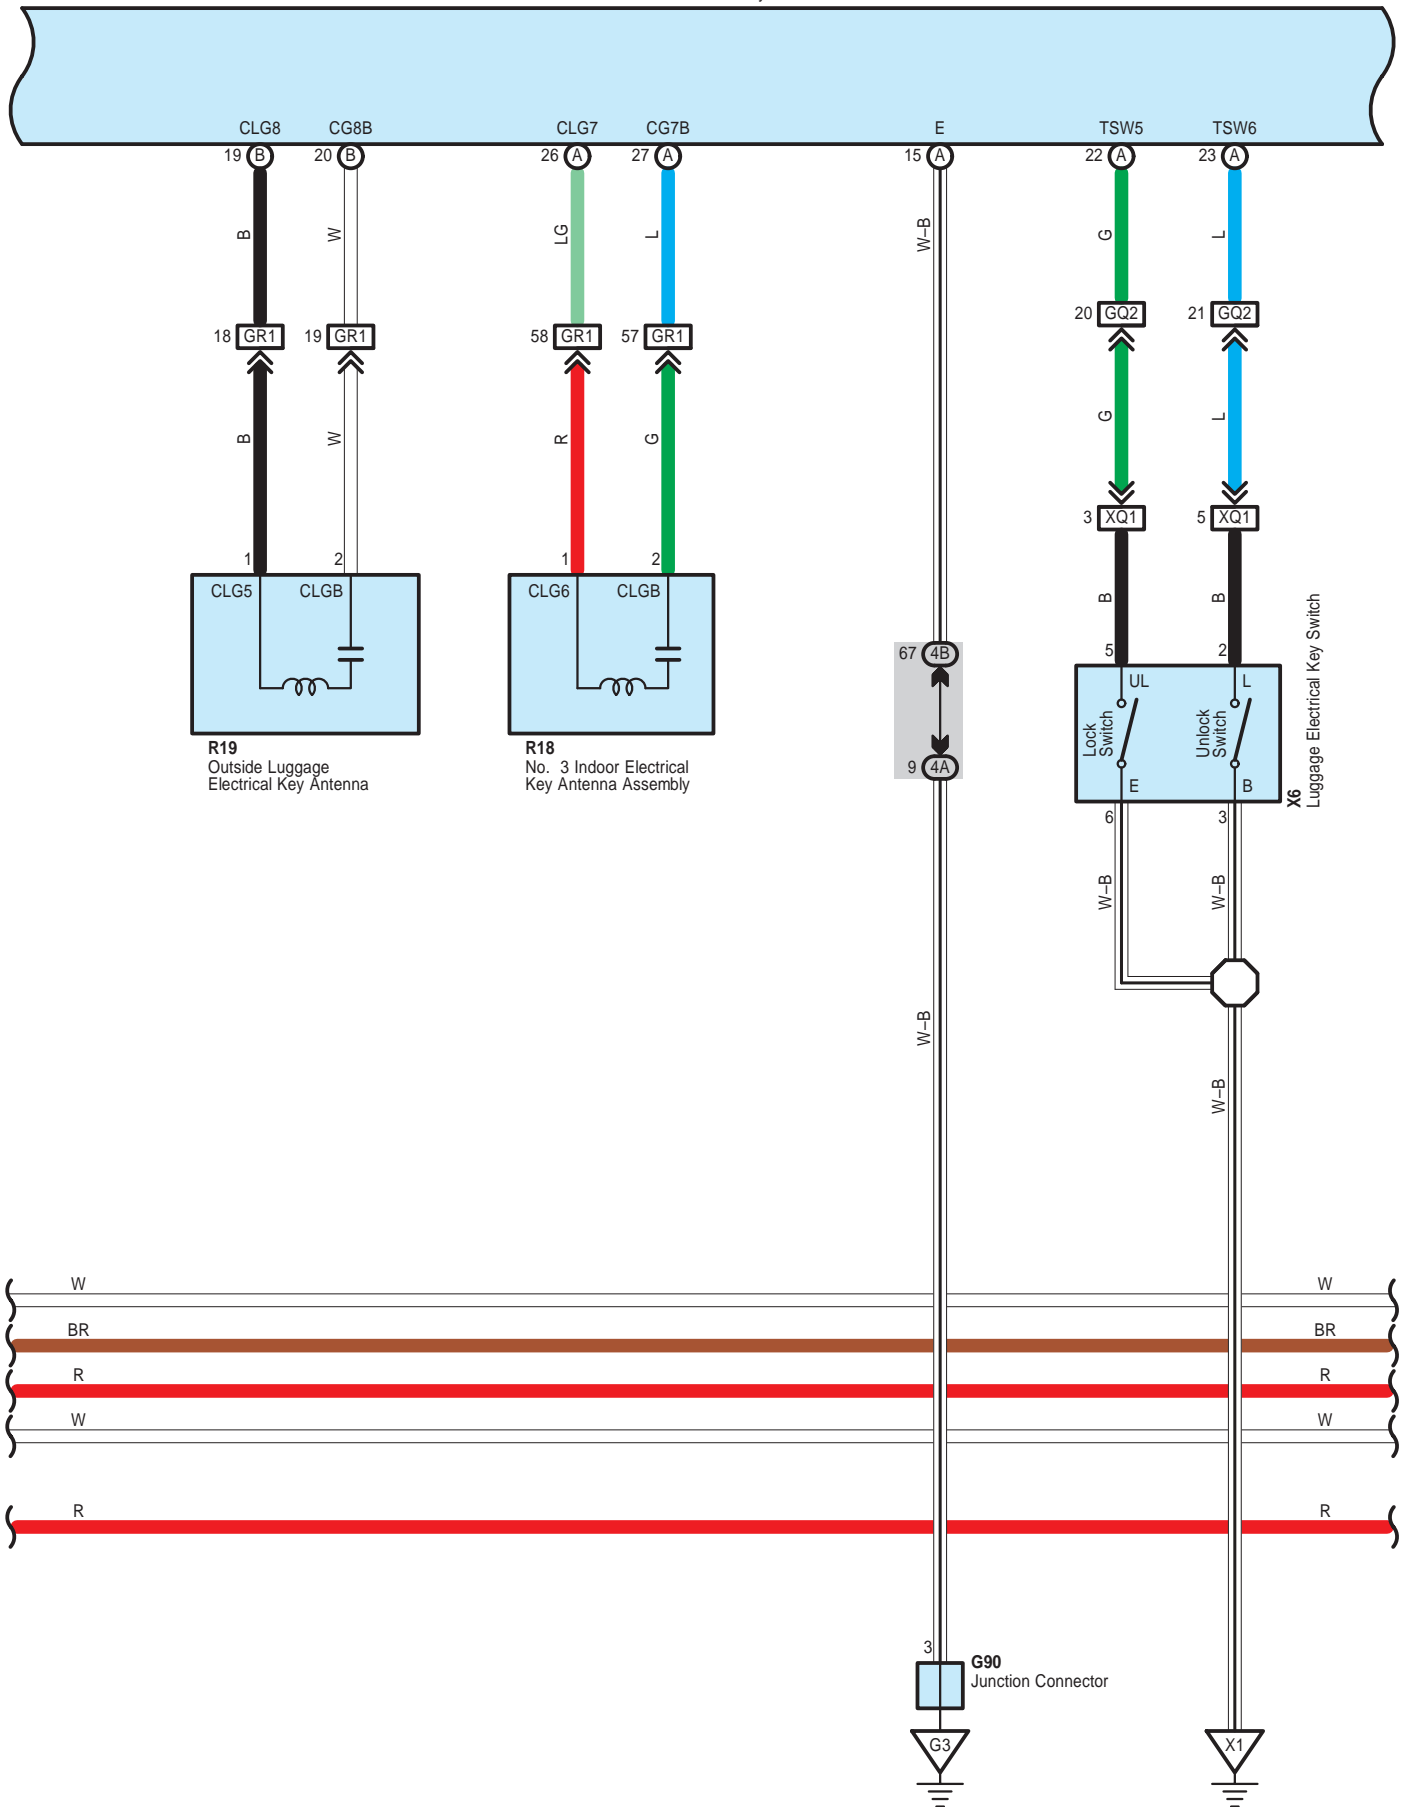



G26(A), G27(B)  
Certification ECU Assembly

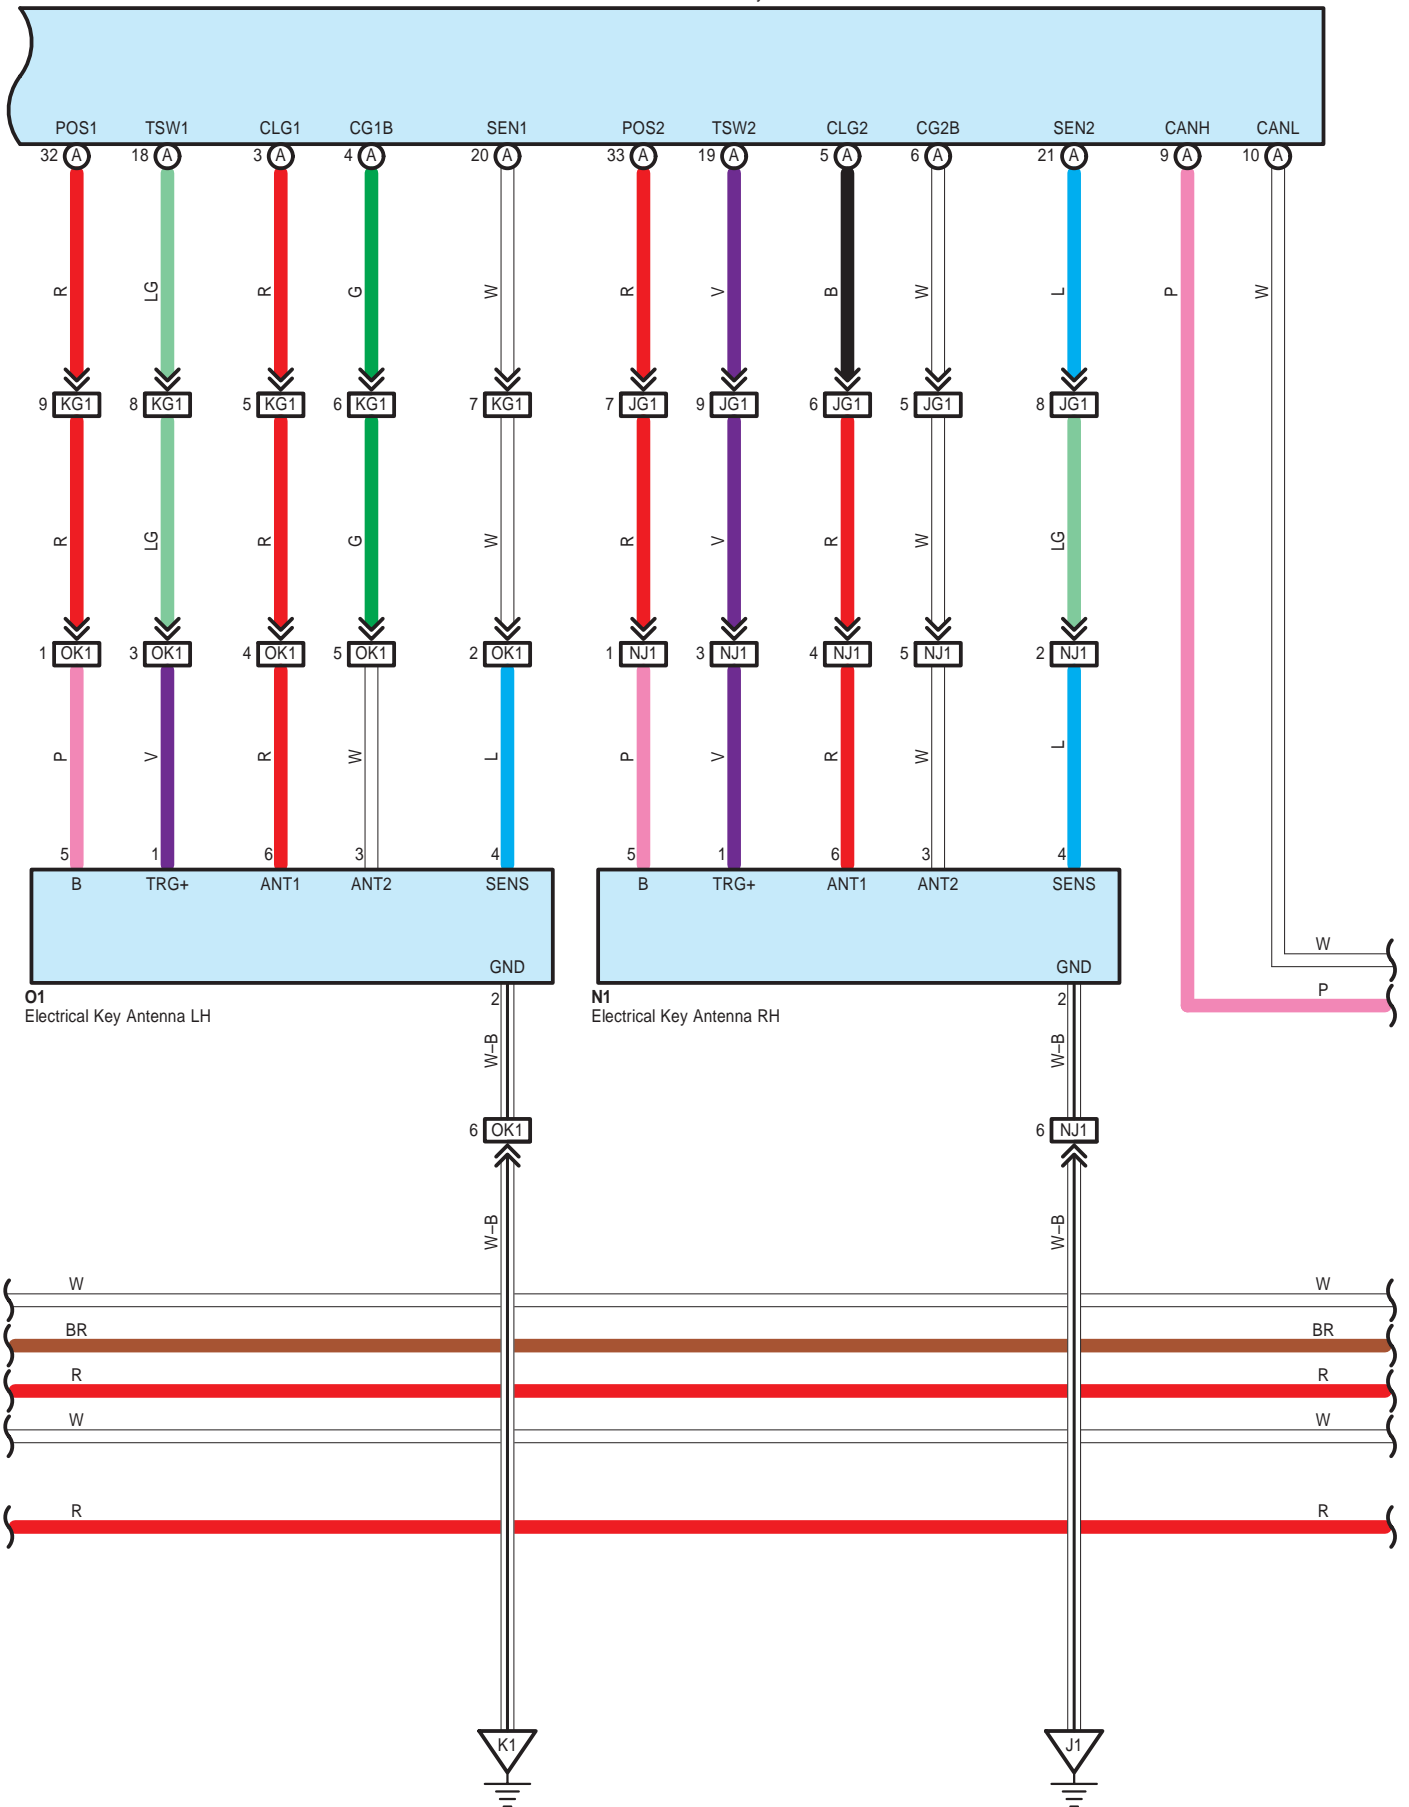

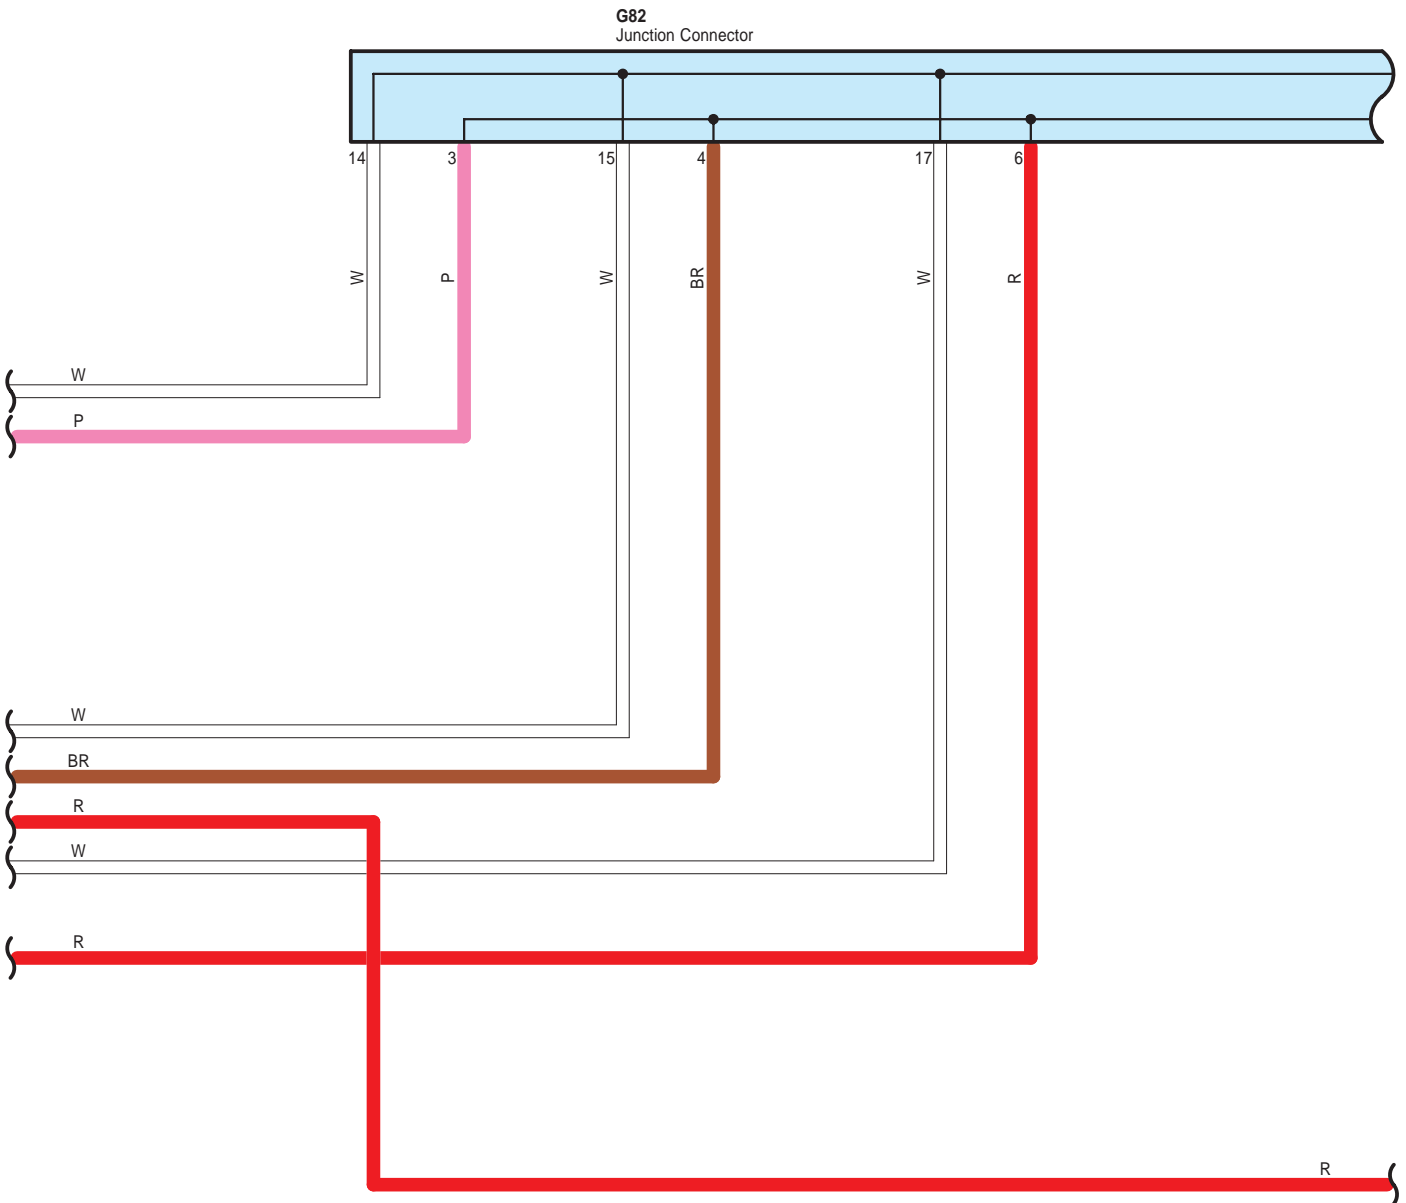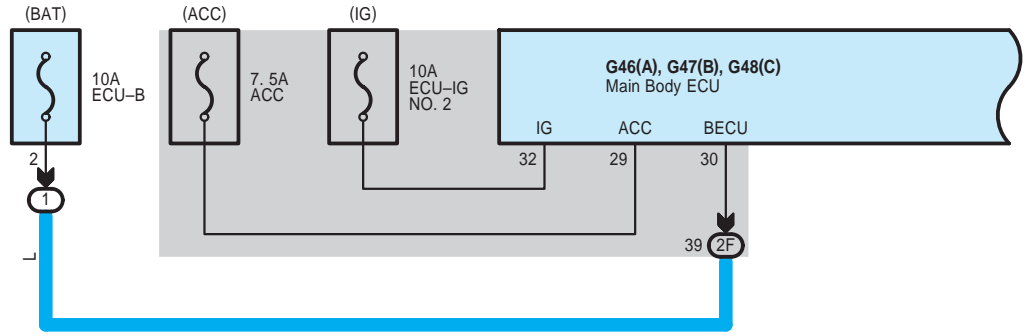


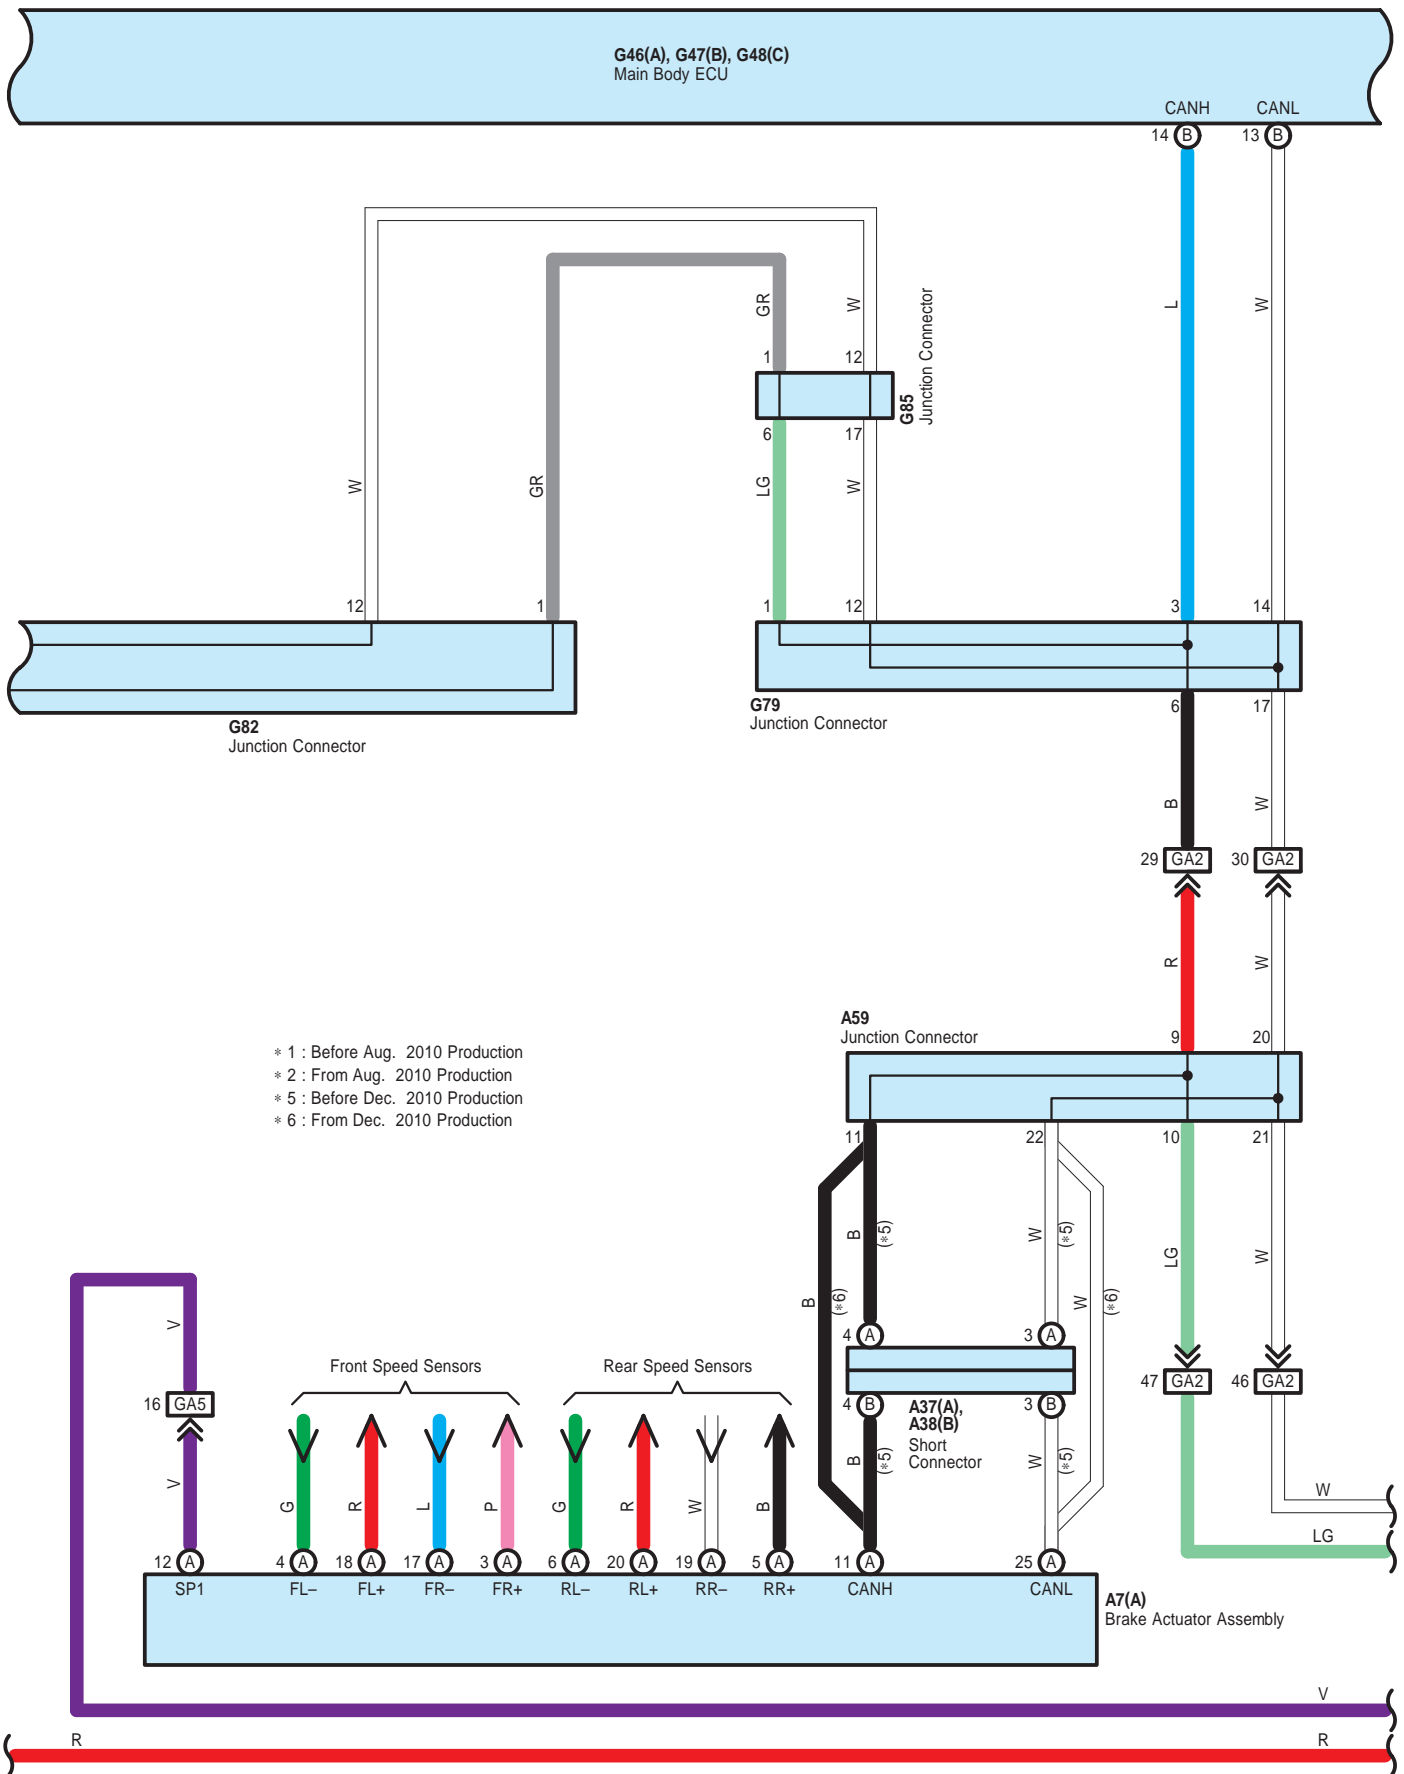

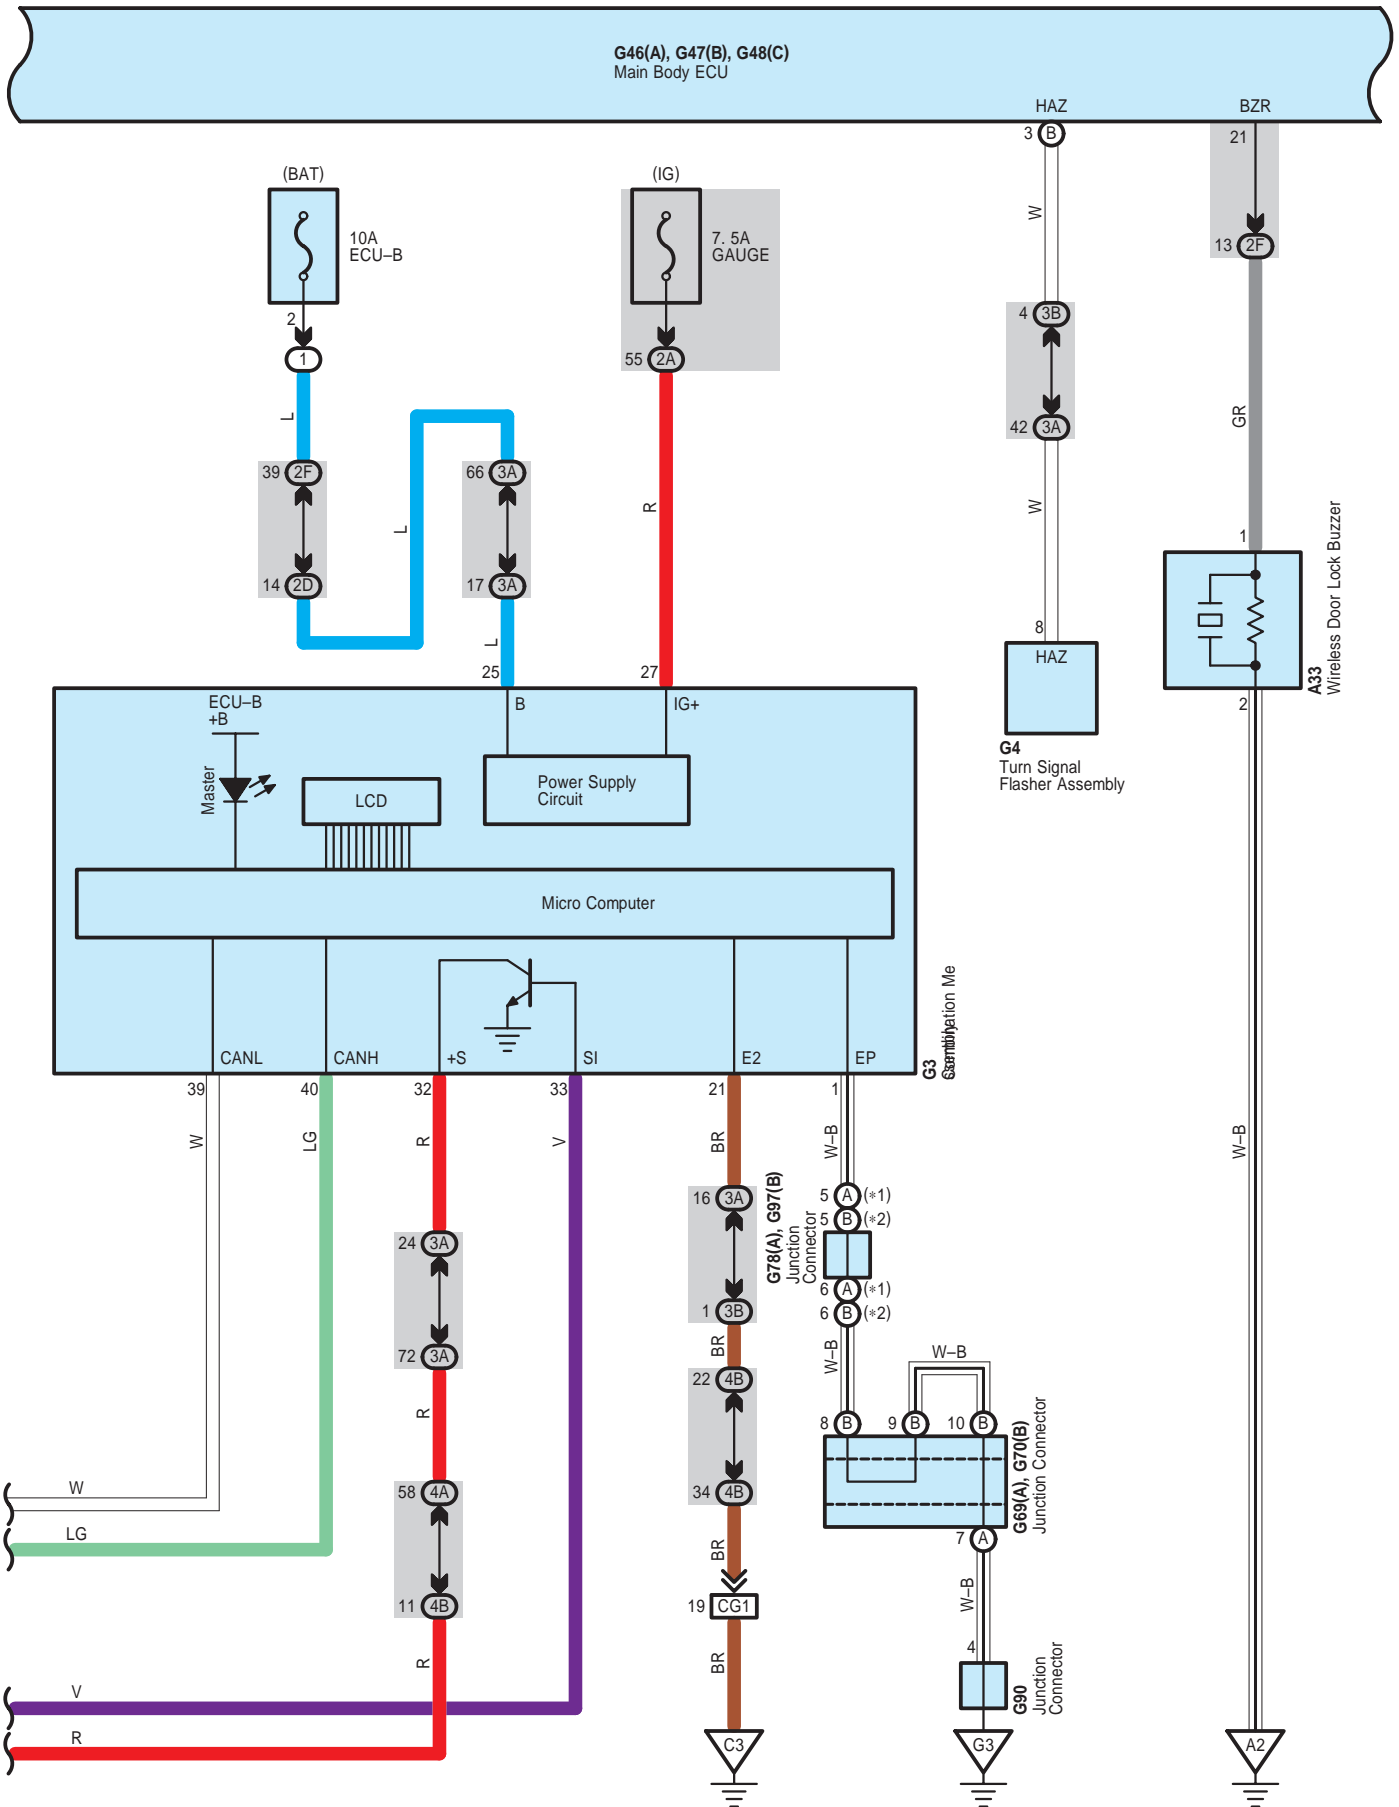

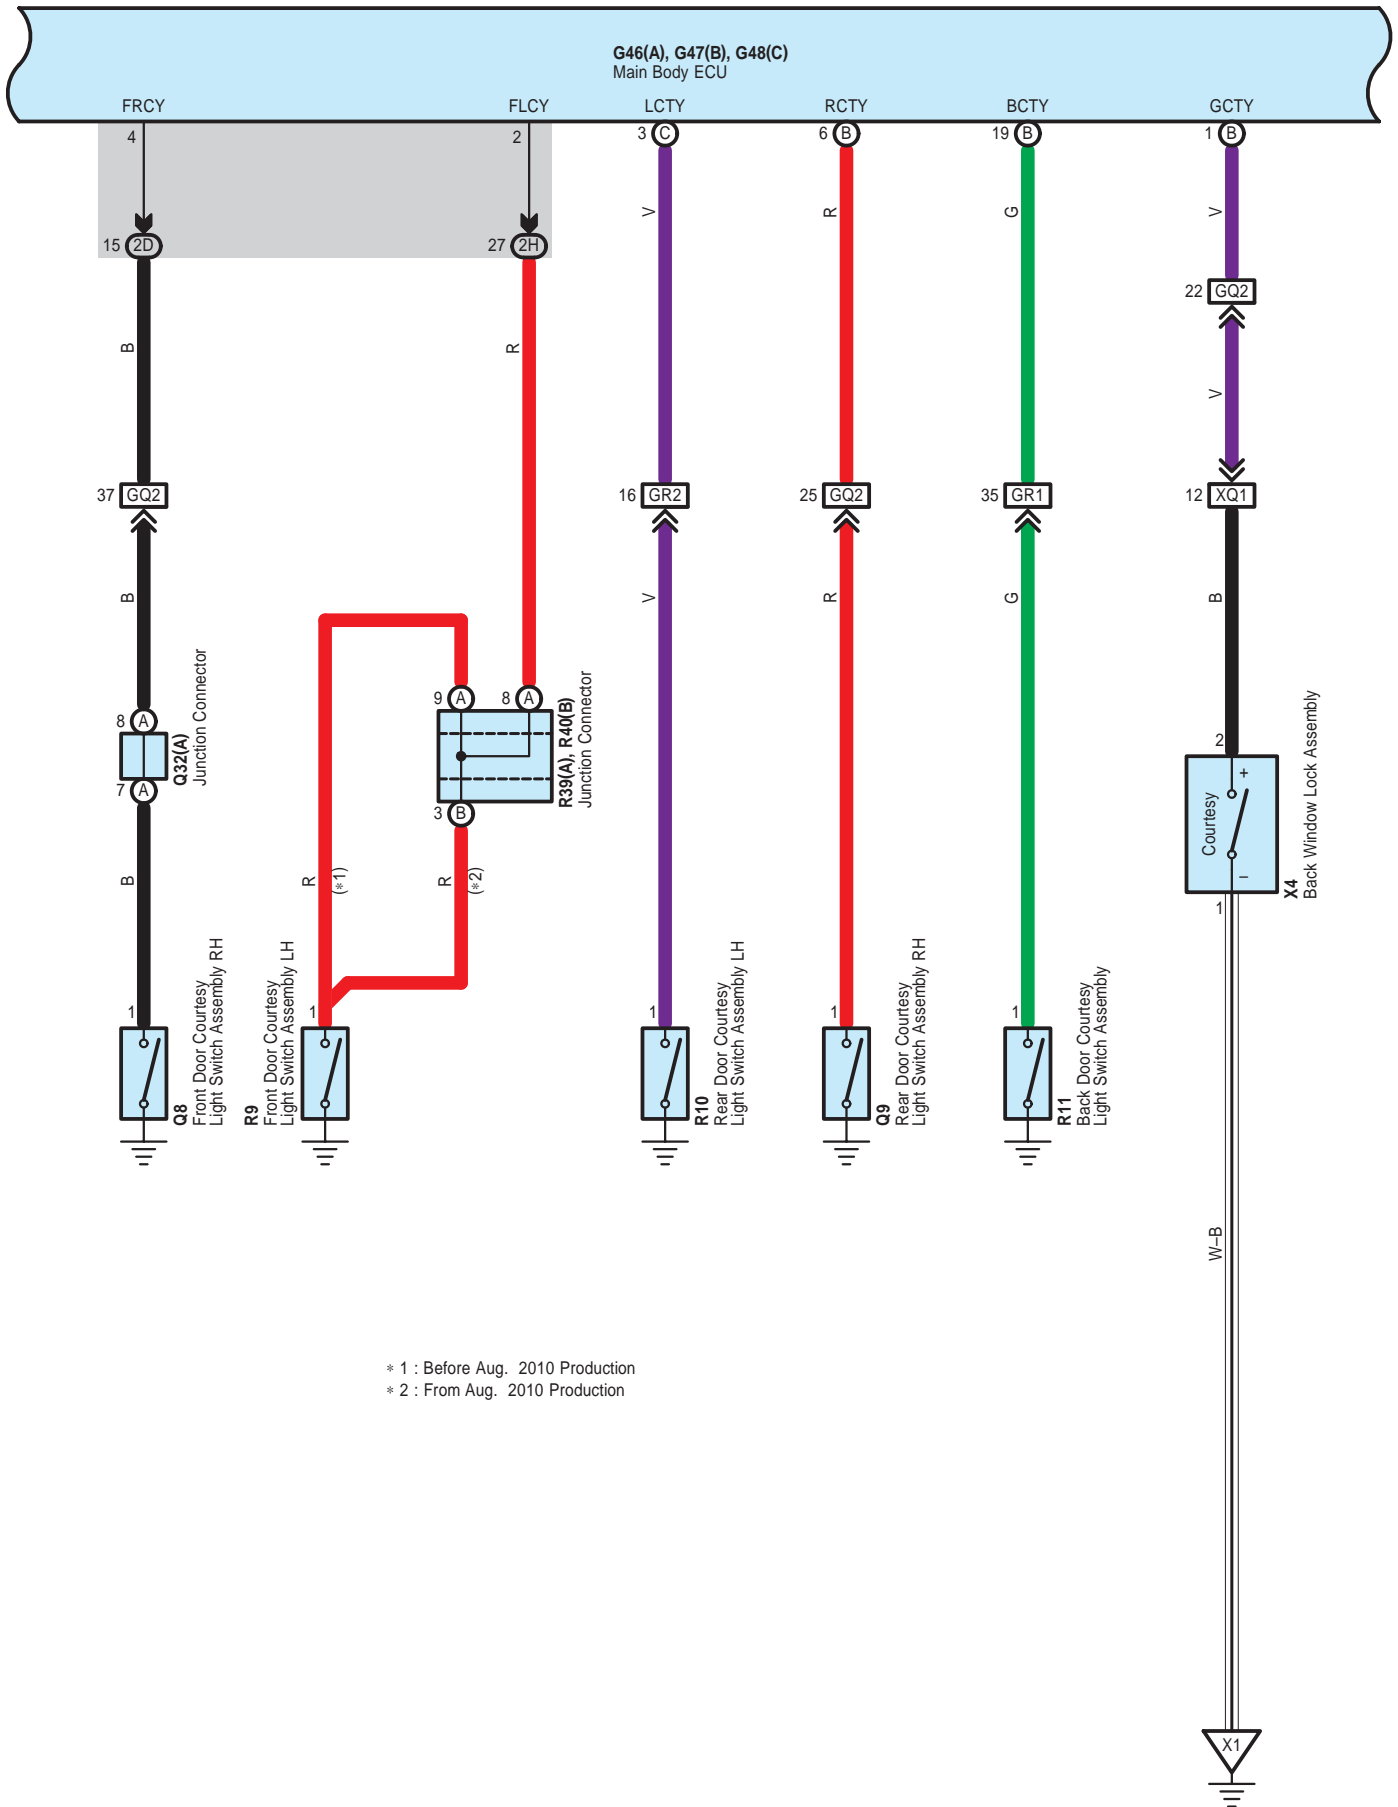

\* 1 : Before Aug. 2010 Production  
 \* 2 : From Aug. 2010 Production

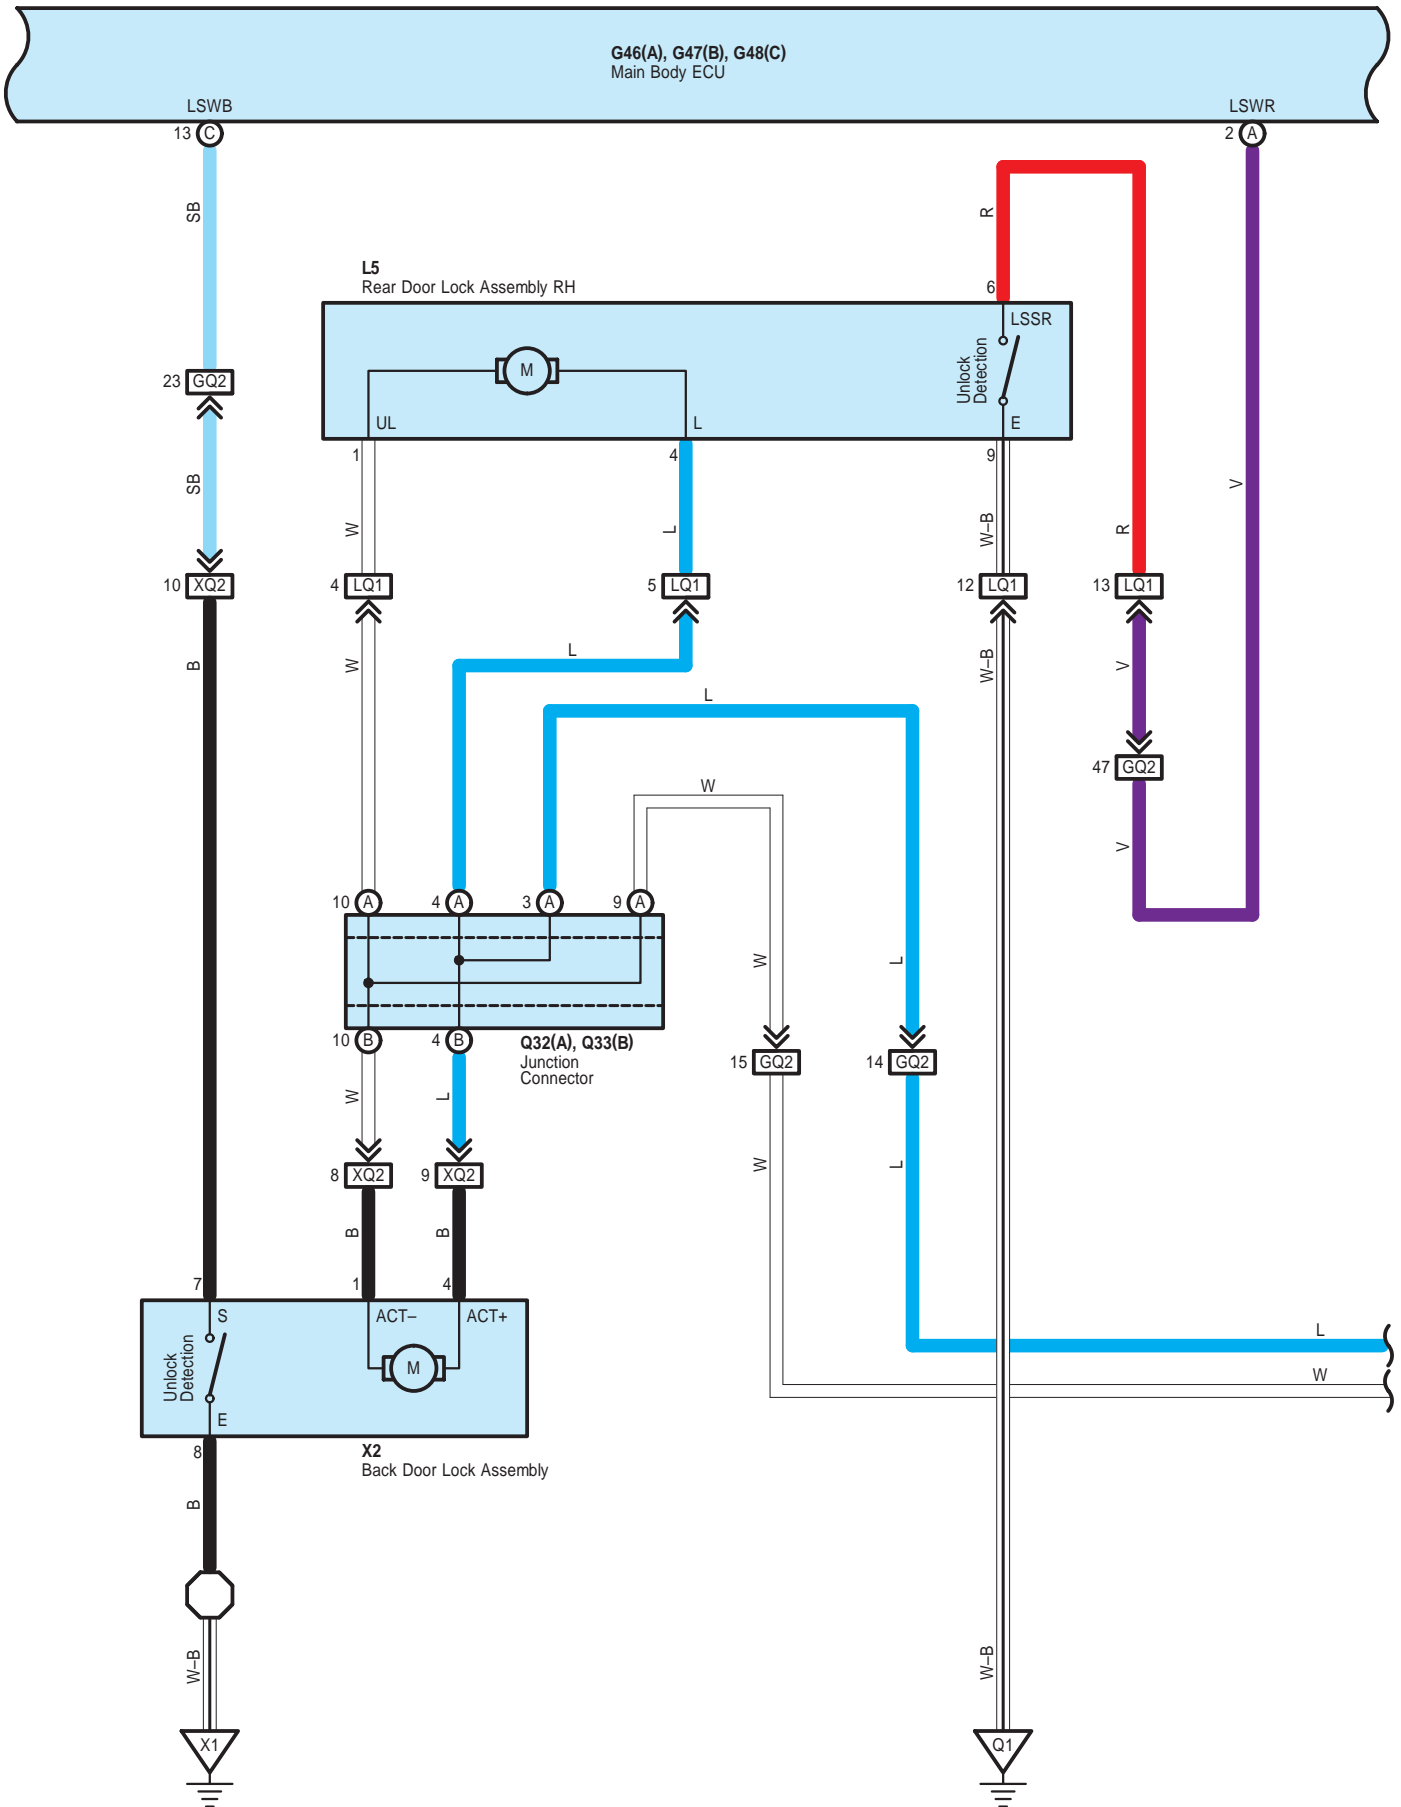





以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/518073007036006067>