Installation Instructions Replacing the Transmitter

Spare Transmitter Promag, Promass 500

These Instructions are Installation Instructions; they do not replace the Operating Instructions included in the scope of supply.

For detailed information, refer to the Operating Instructions and other documentation or visit "www.endress.com/deviceviewer".



1 Overview Spare Transmitter

Instruction is valid for the following spare transmitter:

Order Structure	Device component (Content)
5X5BXX-******B	1 × Transmitter Promag 500 complete including transmitter nameplate 1 × S-DAT programmed 1 × Installation Instruction
8X5BXX-******B	1 × Transmitter Promass 500 complete including transmitter nameplate 1 × S-DAT programmed 1 × Installation Instruction

2 Authorized personnel

NOTICE

The person who carries out the repair is responsible for safety during the work, the quality of work completed and safety of the device after repair.

Approval of the measuring device	Group of persons authorized to carry out repair
without approval	1, 2, 3
with approval (e.g. IECEx)	1, 2, 3


1 = Trained customer technician

2 = Service technician authorized by Endress+Hauser

3 = Endress+Hauser (send measuring device back to manufacturer)

3 Appropriate Use

The spare transmitter and Installation Instructions are used to replace a faulty unit with a functioning unit of the same type. Use genuine parts from Endress+Hauser only. Only original spare transmitter supplied by Endress+Hauser shall be used with the measuring device. The verification has to be done via W@M Device Viewer, this procedure is explained below. For some devices there is an overview of the correct spare parts inside the connection compartment cover. If the spare part is listed there, the verification is no longer required:

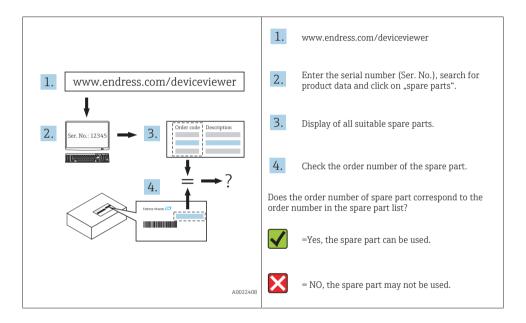

以上内容仅为本文档的试下载部分,为可阅读页数的一半内容。如 要下载或阅读全文,请访问: <u>https://d.book118.com/91622514315</u> 2010143