

jura[®]



ENA 8 (EC/ECS/SC/SCS/INTC)
Instructions for Use

de

en


Your ENA


1 Control elements	38
2 For your safety	40
Comply with the instructions for use	40
Proper use	40
User limitations	40
Use by children	41
What to do in the event of damage	41
Preventing damage	41
Danger of electric shock	42
Danger of burns, scalding and injury	43
3 Preparing and using for the first time	44
Setting up the machine	44
Filling the bean container	44
Determining the water hardness	44
First-time use	45
Managing your ENA – the JURA Cockpit	46
Connecting milk	47
Connecting the machine to the WiFi network (optionally)	47
4 Preparation	48
Preparation with preselection (Speciality Selection)	48
Espresso and coffee	49
Two espressos and two coffees	49
Latte macchiato, cappuccino and other speciality coffees with milk	49
Caffè Barista	50
Espresso doppio	50
Ground coffee	50
Hot water	51
Adjusting the grinder	51
Adjusting the product settings	52
5 Daily operation	52
Switching the machine on and off	52
Filling the water tank	53
Maintenance actions	53

6	Machine settings	54
7	Maintenance	55
	Rinsing the machine	55
	Rinsing the milk system	55
	Cleaning the milk system	56
	Dismantling and rinsing the dual spout	57
	Inserting/changing the filter	58
	Cleaning the machine	59
	Descaling the machine	60
	Descaling the water tank	62
	Cleaning the bean container	62
8	Display messages	63
9	Troubleshooting	64
10	Transport and environmentally friendly disposal	65
	Transport / Emptying the system	65
	Disposal	65
11	Technical data	66
12	Index	67
13	JURA contact details / Legal information	70

1 Control elements



- 1 Bean container with aroma preservation cover
- 2 Grinding wheel
- 3 On/Off button 
- 4 Water tank (with cover)
- 5 Touch display
- 6 Height-adjustable dual spout
- 7 Cup grille
- 8 Coffee grounds container
- 9 Insert for drip tray
- 10 Drip tray
- 11 Mains cable (back of the machine)
- 12 Service socket for optional JURA WiFi Connect
- 13 Powder chute for ground coffee
- 14 Filler funnel for ground coffee
- 15 Measuring spoon for ground coffee
- 16 Container for milk system cleaning

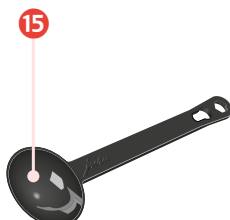



2 For your safety

Comply with the instructions for use

Before using the machine, read these instructions for use thoroughly and completely and comply with the instructions they contain. Keep these instructions for use close to the machine and pass them on to the next user.

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:

 WARNING	Indicates circumstances that may result in serious injuries or death.
 CAUTION	Indicates circumstances that may result in minor injuries.
CAUTION	Indicates circumstances that may result in damage to property.

Proper use

The machine is intended for private domestic use. It should only be used for coffee preparation and to heat milk and water. Use for any other purpose will be deemed improper.

User limitations

People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

When using the CLARIS Smart filter cartridge or a JURA WiFi Connect, wireless connections are established. Specific details on the frequency band used and the maximum transmission power can be found in the 'Technical data' section.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/536241000104010043>